

ENGINEERING DOCUMENTATION

Dual-Axis Hollow Magnetic Encoder

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-EN-C13-S001-TH-FB	DRAFT-08 / 25 Aug 2026	Engineering Integration Reference

Integration Overview


Dual-Axis Hollow Magnetic Encoder for rotary position feedback. This guide supports rotor and stator interface planning, concentricity and axial-gap control, power and signal integration, protocol selection, environmental evaluation and commissioning for ES-EN-C13-S001-TH-FB.

Key Integration Facts




INTEGRATION ITEM	PUBLISHED VALUE
Maximum Rotation Speed	8000 rpm
Angle Resolution	24 bit per axis
Power Supply	4.5 to 5.5 V
Operating Temperature Options	-40 to 85; -40 to 105; -40 to 125 °C

Product Structure & Views

These views present the selected product structure, mounting interfaces and relevant integration geometry for this configuration.

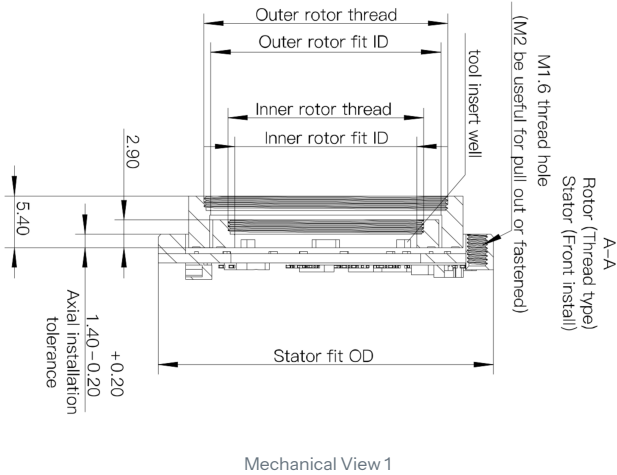

A-A
Stator
(Front/Back install)

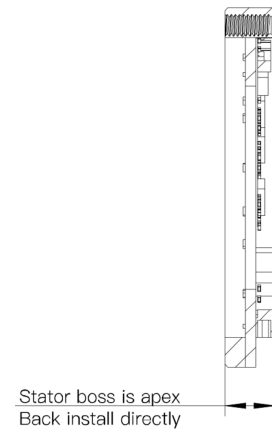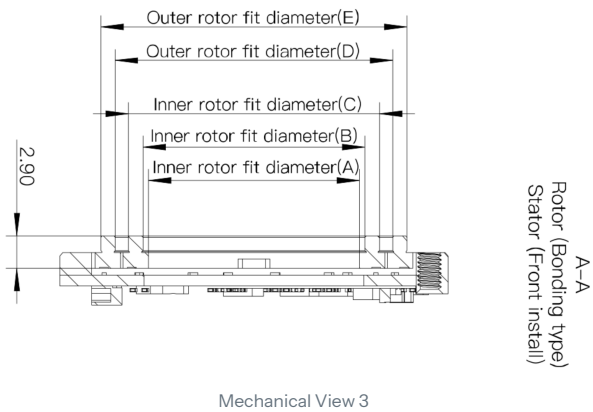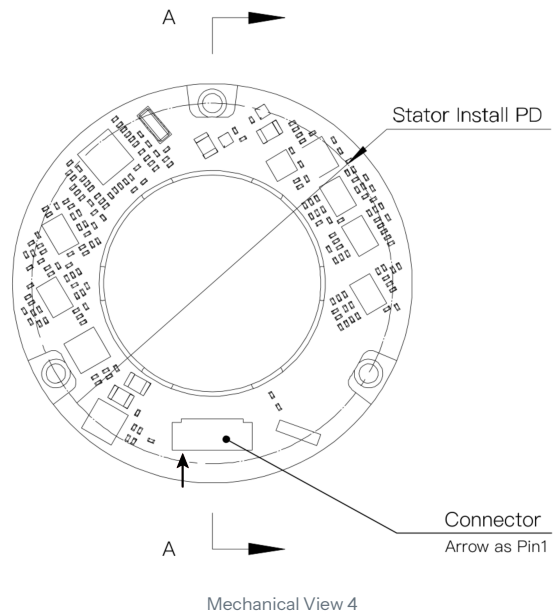

VIEW	FIELD	VALUE
Mechanical View 1	Section view identifier	Section A-A
	Component name	Stator
	Applicable installation orientation	Front or back installation applicable
	Stator boss apex installation reference note	Stator boss is apex
	Back installation instruction	Back install directly
Mechanical View 2	Outer rotor fit diameter E	Outer rotor fit diameter E: Not specified
	Outer rotor fit diameter D	Outer rotor fit diameter D: Not specified
	Inner rotor fit diameter C	Inner rotor fit diameter C: Not specified
	Inner rotor fit diameter B	Inner rotor fit diameter B: Not specified
	Axial mounting dimension	Axial mounting dimension: 2.90 mm
	Inner rotor fit diameter A	Inner rotor fit diameter A: Not specified
	Rotor type note	Rotor: Bonding type
	Stator installation note	Stator: Front install
	Section view identifier	Section A-A
Mechanical View 3	Section or datum identifier A	A
	Stator install pitch diameter callout	Stator Install PD

Overall Dimensions and Mounting Interface

PARAMETER	PUBLISHED VALUE	UNIT
Stator Mounting Pitch Diameter	21.6	mm
Installation Method	Axial hollow	

- Confirm the selected configuration and applicable product documentation before using interface geometry.
- Locate the stator and rotor from their specified cylindrical datums; do not use fasteners to correct runout or misalignment.
- Control concentricity, axial position, rotor insertion direction and operating air gap throughout assembly.

Rotor, Stator and Magnetic Alignment

- Keep the rotor within the approved stator shield envelope and prevent contact over the full runout and thermal range.
- Protect the calibrated rotor-stator pairing from substitution, strong external magnetic fields, impact and metallic debris.
- After assembly, rotate at low speed and verify direction, runout, signal continuity, error status and repeatability.

Speed, Resolution and Accuracy Boundaries

PARAMETER	PUBLISHED VALUE	UNIT
Maximum Rotation Speed	8000	rpm

- Treat maximum rotation speed as a component boundary; validate shaft dynamics, balance, retention and temperature in the installed system.
- Select angle resolution and update frequency with the controller timing, latency and protocol configuration.
- Installed accuracy also depends on runout, concentricity, axial gap, temperature and calibration integrity.

Power, Signal and Protocol Integration

PARAMETER	PUBLISHED VALUE	UNIT
Power Supply	4.5 to 5.5	V
Current Consumption	130	mA
Startup Time	15	ms
Supported Output Interfaces	RS485; BiSS-C	

- Select one selected output interface and use its current pin assignment, termination, timing and CRC rules.
- Provide regulated power, return, shielding and grounding compatible with the controller and cable length.
- Battery supply applies only to a compatible battery multi-turn configuration; verify polarity, service life, isolation and fault handling.

Cable, EMC and Status Handling

- Route differential signals as differential pairs and keep them separated from motor phase and switching-power conductors.
- Terminate the cable shield according to the system grounding architecture and prevent cable force from loading the encoder.
- Map warning, error, battery, magnetic-field, temperature and overspeed status into commissioning and machine fault handling.

Environmental and Service Conditions

PARAMETER	PUBLISHED VALUE	UNIT
Operating Temperature Options	-40 to 85; -40 to 105; -40 to 125	°C

- Confirm the ordered temperature option and validate temperature at the installed stator and nearby drive components.
- Prevent oil, dust, metallic particles, condensation and cleaning residue from entering the rotor-stator gap and connector.
- Stop and inspect after impact, rotor contact, abnormal runout, magnetic contamination, overspeed or repeated status faults.

Integration Checklist

- 01 Confirm the exact SKU, interface drawing and selected encoder configuration.
- 02 Verify rotor and stator diameters, mounting pitch, axial position, concentricity and operating gap.
- 03 Confirm shaft shoulder, rotor retention, fasteners and full-speed mechanical integrity.
- 04 Select one selected protocol and verify pin assignment, termination, timing, CRC and status mapping.
- 05 Verify regulated power, current, battery configuration, grounding, shielding and cable strain relief.
- 06 At low speed verify direction, absolute position, repeatability, warning and error behavior.
- 07 Validate speed, update rate, accuracy and temperature over the complete duty cycle.
- 08 Protect the magnetic gap and connector from contamination, impact and strong external fields.
- 09 Include specified 2D, STEP, pinout, protocol and installation data in integration planning.

[View SKU Product Datasheet](#) [Request controlled 2D drawing](#) [Request controlled STEP review](#) [Request a Quote](#)

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-EN-C13-S001-TH-FB and is intended for dimensional evaluation and preliminary integration. It is not a applicable manufacturing drawing, encoder selection approval, shaft or rotor retention approval, wiring final integration, calibration certificate, machinery risk assessment, safety validation or integration planning document. Before design freeze, assembly or commissioning, verify dimensions, fits, datums, concentricity, runout, axial gap, rotor retention, speed, resolution, accuracy, power, protocol, pinout, termination, grounding, shielding, status handling, temperature, contamination and fault response against the applicable EmbodyStack engineering data for this exact SKU and ordered configuration. Where this guide and applicable product documentation differ, the applicable product documentation governs. Validate the complete encoder, shaft, motor, controller, cable, host structure and machine under intended operating, fault, environmental and regulatory conditions.