

ENGINEERING DOCUMENTATION

Cup Component Set

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-HG-S01-F20-R50	DRAFT-08 / 26 Aug 2026	Engineering Integration Reference

Integration Overview

Cup-form harmonic gear component set requiring specified host housing, support-bearing and sealing integration for compact, coaxial, high-ratio rotary axes. This guide supports host-interface design, wave-generator input integration, mounting alignment, load-cycle validation, torsional behavior, lubrication, sealing and commissioning for ES-HG-S01-F20-R50.

Key Integration Facts

INTEGRATION ITEM	PUBLISHED VALUE
Rated Torque	25 Nm
Instantaneous Maximum Torque	98 Nm
Start/Stop Peak Torque	56 Nm
Backlash	±0 arc sec
Reduction Ratio	50
Maximum Input Speed	6500 r/min
Frame Size	20
Weight	0.28 kg

VIEW	FIELD	VALUE
Mechanical View 1	Width label W	W dimension label; value not specified in this crop
	4 through holes with counterbore	4 × Ø1.5 through; counterbore Ø1.5 × 3.5 deep
	16-hole diameter	16 × Ø1.5 holes
	4-hole diameter	4 × Ø1.5 holes
	Outer diameter	Outer diameter Ø2
	Label U	U label; value not specified
	4 M4 threaded holes	4 × M4 threaded holes
	Diameter	Diameter Ø7
	Hole pattern angular spacing	22.5 degrees
	Hole pattern angular offset	11.25 degrees
	Hole pattern angular span	33.75 degrees
Mechanical View 2	Left step length with unilateral tolerance	21.5 +0.4/0 mm
	Right step length	7.5 mm
	Right minimum clearance	Minimum 1.5 mm
	Left minimum length	Minimum 20.5 mm
	Left outer diameter fit	Diameter 55 h7
	Left minimum diameter	Minimum diameter 53 mm
	Left inner diameter	Diameter 32 mm
	Left bore diameter fit	Diameter 14 H7
	Local horizontal distance	3.1 mm
	Dimension symbol D	D, value not specified in this crop
	Dimension symbol T	T, value not specified in this crop
	Right inner diameter	Diameter 33 mm
	Right minimum diameter	Minimum diameter 53 mm
	Right outer diameter fit	Diameter 70 h6
	Right outer diameter	Diameter 70 mm
	Bottom horizontal width	14 ±0.2 mm
Mechanical View 3	Quantity and diameter of equally spaced mounting holes	8 holes, diameter 5.5 mm
	Pitch circle diameter for hole pattern	Pitch circle diameter 24 mm
Mechanical View 4	View identifier	View D
	Outer diameter	Diameter 22 mm
	Inner circle diameter	Diameter 18 mm
	Threaded hole quantity and size	2 x M2.5 threaded holes
	Countersink or depth callout	5 mm

Overall Dimensions and Input Interface

PARAMETER	PUBLISHED VALUE	UNIT
Frame Size	20	
Weight	0.28	kg
Wave Generator Dimension T	12.8+0.10 / 16.3+0.10 / 9.4+0.10	mm
Wave Generator Bore U	Ø1H7 / ØH7 / Ø4H7	
Wave Generator Keyway W	4JS9/P9 / 5JS9/P9 / 3JS9/P9	

- Confirm the selected series, frame size and ratio before using dimensions or interface geometry. Do not substitute a nearby frame or product form.
- Design the input shaft, key, effective engagement and axial retention to transmit the verified torque without uncontrolled wave-generator axial movement.
- Reserve assembly, sealing, inspection and removal access around the input, housing and output interfaces.

Mounting, Alignment and Fastener Control

- Keep mounting faces flat, clean and free of burrs, raised holes, debris and coating buildup. Confirm reliefs and chamfers prevent interference.
- Seat the fixed and flexible gear members in the host structure before inserting the wave generator. Do not force engagement in a misaligned condition.
- Control concentricity, tilt and axial position of the input and housing datums. Insert the wave generator smoothly without excessive force on its bearing.
- Tighten fasteners in a staged diagonal sequence using the applicable torque and locking specification. Verify free, even rotation during assembly.

Torque, Speed and Duty Boundaries

PARAMETER	PUBLISHED VALUE	UNIT
Rated Torque	25	N·m
Allowable Average Torque	34	N·m
Start/Stop Peak Torque	56	N·m
Instantaneous Maximum Torque	98	N·m
Maximum Input Speed	6500	r/min
Average Input Speed	3500	r/min
Design Life	10000	h

- Calculate average torque and average input speed from the complete acceleration, constant-speed, deceleration, dwell and reversal cycle.
- Treat start/stop peak and instantaneous maximum torque as transient boundaries. Do not use either value as a continuous operating point.
- Validate design life against actual torque, speed, shock frequency, lubrication, temperature, alignment and external loading.

Published Torque, Speed and Life Boundaries

PARAMETER	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Rated Torque	25 N·m	Use as the selected continuous output rating under validated duty and thermal conditions.
Allowable Average Torque	34 N·m	Calculate the actual time-weighted output torque over the complete cycle.
Start/Stop Peak Torque	56 N·m	Transient start/stop boundary; include acceleration and deceleration events.
Instantaneous Maximum Torque	98 N·m	Short-duration shock boundary only; do not use as a normal operating point.
Maximum Input Speed	6500 r/min	Maximum input-speed boundary; also verify motor and thermal limits.
Average Input Speed	3500 r/min	Validate the time-weighted average input speed over the complete duty cycle.
Design Life	10000 h	Design reference only; actual life depends on torque, speed, shock, lubrication and installation.

Transmission Accuracy and Torsional Rigidity

PARAMETER	PUBLISHED VALUE	UNIT
Backlash	±0	arc sec

- Installed positioning performance depends on reducer behavior, datum control, fastener distortion, motor and encoder errors, host stiffness and thermal growth.
- Use the published stiffness regions and transition torques when evaluating compliance, resonance, control gain and direction reversal.

Published Accuracy and Torsional Rigidity Boundaries

PARAMETER	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Backlash	±0 arc sec	Validate at the selected measurement condition and installed preload state.

Lubrication, Sealing and Thermal Control

- Use only the current lubricant, fill method and quantity for the exact configuration. Do not mix incompatible lubricants.
- Provide compatible static and dynamic sealing at the input, output and housing interfaces without distorting the reducer or restricting motion.
- Validate lubricant distribution and temperature for the installed orientation, speed, load cycle and enclosure.
- Prevent chips, fibers, cleaning residue, moisture and other contamination from entering the gear or bearing cavities during assembly and service.

Output Bearing and External Load Path

- Calculate radial, axial and moment loads at the output, including offset, acceleration, gravity, process force, impact and emergency-stop cases.
- Do not infer permissible external load from reducer torque capacity or frame size. Use applicable output-bearing data and safety criteria.
- Avoid forcing, impact, misalignment or host distortion through the output support bearing during installation and operation.

Integration Checklist

- | | |
|----|--|
| 01 | Confirm the drawing, published parameters and applicable assembly data identify this SKU. |
| 02 | Verify series, frame size, ratio, product form and input-interface dimensions. |
| 03 | Check mounting-face flatness, concentricity, tilt, chamfers, reliefs, cleanliness and support stiffness. |
| 04 | Verify input shaft, key, engagement length and axial wave-generator retention. |
| 05 | Assemble the fixed and flexible gear members before inserting the wave generator. |
| 06 | Use staged diagonal tightening and verify free, even rotation throughout assembly. |
| 07 | Calculate average, start/stop peak and shock torque over the complete operating cycle. |
| 08 | Validate average and maximum input speed, design life and installed thermal condition. |
| 09 | Evaluate backlash, angular accuracy, hysteresis and stiffness regions for the control system. |
| 10 | Confirm exact lubricant, fill quantity, orientation, sealing and contamination controls. |
| 11 | Validate output radial, axial and moment loads using applicable bearing data. |
| 12 | Include specified 2D, STEP, assembly, lubrication and bearing-load data in integration planning. |

[View SKU Product Datasheet](#)[Request controlled 2D drawing](#)[Request controlled STEP review](#)[Request a Quote](#)

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-HG-S01-F20-R50 and is intended for dimensional evaluation and preliminary integration. It is not a applicable manufacturing drawing, reducer selection approval, bearing-load approval, lubrication specification, machinery risk assessment, safety validation or integration planning document and must not be used as the sole basis for machining, shaft or key manufacture, fastener selection, sealing, lubricant filling or final integration. Before design freeze, assembly or commissioning, verify all dimensions, datum geometry, fits, shaft and key interfaces, wave-generator retention, fastener engagement and tightening controls, torque and speed duty, shock cases, torsional accuracy and rigidity, external output loads, lubrication, sealing, temperature, contamination and maintenance requirements against the applicable EmbodyStack engineering data for this exact SKU. Where this guide and applicable product documentation differ, the applicable product documentation governs. Validate the complete reducer, motor, host structure, output load, motion cycle, guarding, fault cases and applicable regulatory requirements under intended operating conditions.