

ENGINEERING DOCUMENTATION

Cup Component Set

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-HG-S01-F25-R100	DRAFT-08 / 26 Aug 2026	Engineering Integration Reference

Integration Overview


Cup-form harmonic gear component set requiring specified host housing, support-bearing and sealing integration for compact, coaxial, high-ratio rotary axes. This guide supports host-interface design, wave-generator input integration, mounting alignment, load-cycle validation, torsional behavior, lubrication, sealing and commissioning for ES-HG-S01-F25-R100.

Key Integration Facts


INTEGRATION ITEM	PUBLISHED VALUE
Rated Torque	67 Nm
Instantaneous Maximum Torque	284 Nm
Start/Stop Peak Torque	157 Nm
Backlash	±0 arc sec
Reduction Ratio	100
Maximum Input Speed	5600 r/min
Frame Size	25
Weight	0.42 kg

Product Structure & Views


These views present the selected product structure, mounting interfaces and relevant integration geometry for this SKU.

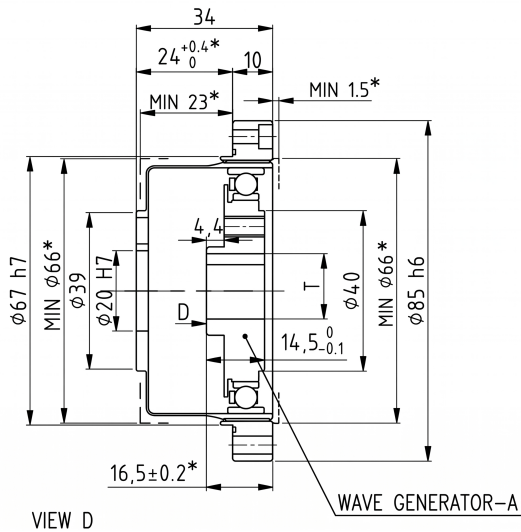


Mechanical View 1

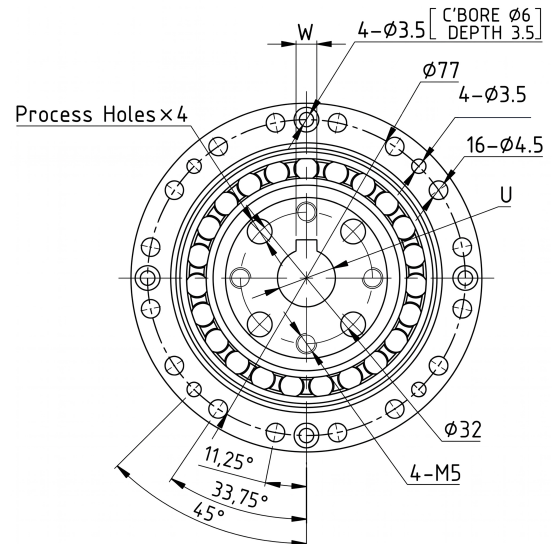

Mechanical View 2

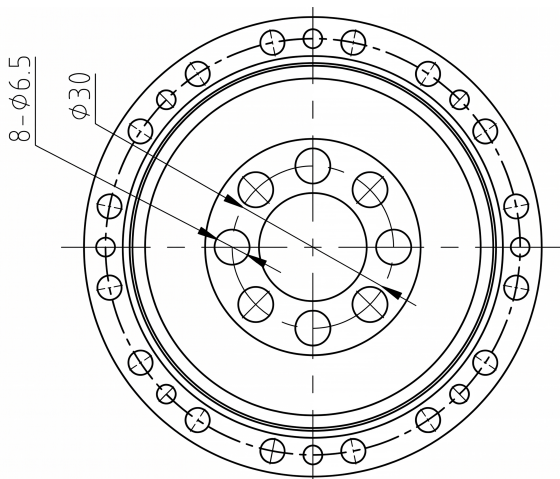

Mechanical View 3

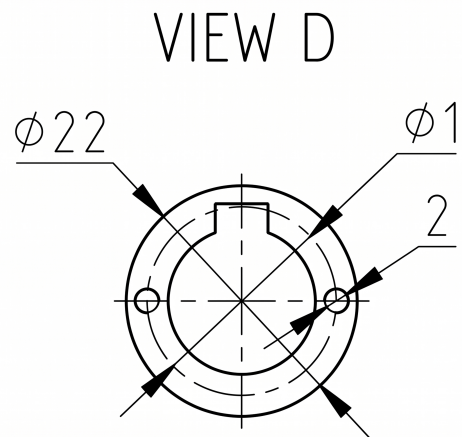

Mechanical View 4

VIEW	FIELD	VALUE
Mechanical View 1	Top overall width	34 mm
	Upper step length with unilateral tolerance	24 mm +0.4/0
	Upper right step length	10 mm
	Minimum clearance	Minimum 1.5 mm
	Minimum length	Minimum 23 mm
	Outer diameter fit	Diameter 67 h7
	Minimum outside diameter	Minimum diameter 66 mm
	Diameter dimension	Diameter 39 mm
	Bore diameter fit	Diameter 20 H7
	Small step width	4.4 mm
	D view or datum marker	D
	Diameter dimension	Diameter 40 mm
	Outer diameter fit	Diameter 85 h6
	Axial height with unilateral tolerance	14.5 mm +0/-0.1
	Bottom length with symmetric tolerance	16.5 mm ±0.2
	Component label	Wave Generator-A
	T marker	T
Mechanical View 2	Four counterbored holes	4 holes, through/pre-drill diameter $\varnothing 5$, counterbore diameter $\varnothing 6$, counterbore depth 3.5
	Width designation	Width designation W; numeric value not specified in this crop
	Outer diameter	Outer diameter $\varnothing 7$
	Four diameter 3.5 holes	4 holes, diameter $\varnothing 3.5$
	Process holes quantity	Process holes, quantity 4
	Sixteen diameter 4.5 holes	16 holes, diameter $\varnothing 4.5$
	Feature designation U	Feature designation U; detailed value not specified in this crop
	Diameter 32	Diameter $\varnothing 2$
	Angular spacing 11.25 degrees	11.25° angular dimension
	Four M5 threaded holes	4 × M5 threaded holes
	Angular spacing 33.75 degrees	33.75° angular dimension
	Angular spacing 45 degrees	45° angular dimension
Mechanical View 3	Mounting hole quantity and diameter	8 holes, diameter 6.5
	Central bore diameter	Diameter 30
Mechanical View 4	View identifier	View D
	Hole or circular feature diameter	Diameter 22 mm
	Local dimension value	2 mm

Overall Dimensions and Input Interface

PARAMETER	PUBLISHED VALUE	UNIT
Frame Size	25	
Weight	0.42	kg
Wave Generator Dimension T	16.3+0.10 / 12.8+0.10	mm
Wave Generator Bore U	Ø4H7 / Ø1H7	
Wave Generator Keyway W	4JS9/P9 / 5JS9/P9	

- Confirm the selected series, frame size and ratio before using dimensions or interface geometry. Do not substitute a nearby frame or product form.
- Design the input shaft, key, effective engagement and axial retention to transmit the verified torque without uncontrolled wave-generator axial movement.
- Reserve assembly, sealing, inspection and removal access around the input, housing and output interfaces.

Mounting, Alignment and Fastener Control

- Keep mounting faces flat, clean and free of burrs, raised holes, debris and coating buildup. Confirm reliefs and chamfers prevent interference.
- Seat the fixed and flexible gear members in the host structure before inserting the wave generator. Do not force engagement in a misaligned condition.
- Control concentricity, tilt and axial position of the input and housing datums. Insert the wave generator smoothly without excessive force on its bearing.
- Tighten fasteners in a staged diagonal sequence using the applicable torque and locking specification. Verify free, even rotation during assembly.

Torque, Speed and Duty Boundaries

PARAMETER	PUBLISHED VALUE	UNIT
Rated Torque	67	N·m
Allowable Average Torque	108	N·m
Start/Stop Peak Torque	157	N·m
Instantaneous Maximum Torque	284	N·m
Maximum Input Speed	5600	r/min
Average Input Speed	3500	r/min
Design Life	15000	h

- Calculate average torque and average input speed from the complete acceleration, constant-speed, deceleration, dwell and reversal cycle.
- Treat start/stop peak and instantaneous maximum torque as transient boundaries. Do not use either value as a continuous operating point.
- Validate design life against actual torque, speed, shock frequency, lubrication, temperature, alignment and external loading.

Published Torque, Speed and Life Boundaries

PARAMETER	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Rated Torque	67 N·m	Use as the selected continuous output rating under validated duty and thermal conditions.
Allowable Average Torque	108 N·m	Calculate the actual time-weighted output torque over the complete cycle.
Start/Stop Peak Torque	157 N·m	Transient start/stop boundary; include acceleration and deceleration events.
Instantaneous Maximum Torque	284 N·m	Short-duration shock boundary only; do not use as a normal operating point.
Maximum Input Speed	5600 r/min	Maximum input-speed boundary; also verify motor and thermal limits.
Average Input Speed	3500 r/min	Validate the time-weighted average input speed over the complete duty cycle.
Design Life	15000 h	Design reference only; actual life depends on torque, speed, shock, lubrication and installation.

Transmission Accuracy and Torsional Rigidity

PARAMETER	PUBLISHED VALUE	UNIT
Backlash	±0	arc sec

- Installed positioning performance depends on reducer behavior, datum control, fastener distortion, motor and encoder errors, host stiffness and thermal growth.
- Use the published stiffness regions and transition torques when evaluating compliance, resonance, control gain and direction reversal.

Published Accuracy and Torsional Rigidity Boundaries

PARAMETER	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Backlash	±0 arc sec	Validate at the selected measurement condition and installed preload state.

Lubrication, Sealing and Thermal Control

- Use only the current lubricant, fill method and quantity for the exact configuration. Do not mix incompatible lubricants.
- Provide compatible static and dynamic sealing at the input, output and housing interfaces without distorting the reducer or restricting motion.
- Validate lubricant distribution and temperature for the installed orientation, speed, load cycle and enclosure.
- Prevent chips, fibers, cleaning residue, moisture and other contamination from entering the gear or bearing cavities during assembly and service.

Output Bearing and External Load Path

- Calculate radial, axial and moment loads at the output, including offset, acceleration, gravity, process force, impact and emergency-stop cases.
- Do not infer permissible external load from reducer torque capacity or frame size. Use applicable output-bearing data and safety criteria.
- Avoid forcing, impact, misalignment or host distortion through the output support bearing during installation and operation.

Integration Checklist

- | | |
|----|--|
| 01 | Confirm the drawing, published parameters and applicable assembly data identify this SKU. |
| 02 | Verify series, frame size, ratio, product form and input-interface dimensions. |
| 03 | Check mounting-face flatness, concentricity, tilt, chamfers, reliefs, cleanliness and support stiffness. |
| 04 | Verify input shaft, key, engagement length and axial wave-generator retention. |
| 05 | Assemble the fixed and flexible gear members before inserting the wave generator. |
| 06 | Use staged diagonal tightening and verify free, even rotation throughout assembly. |
| 07 | Calculate average, start/stop peak and shock torque over the complete operating cycle. |
| 08 | Validate average and maximum input speed, design life and installed thermal condition. |
| 09 | Evaluate backlash, angular accuracy, hysteresis and stiffness regions for the control system. |
| 10 | Confirm exact lubricant, fill quantity, orientation, sealing and contamination controls. |
| 11 | Validate output radial, axial and moment loads using applicable bearing data. |
| 12 | Include specified 2D, STEP, assembly, lubrication and bearing-load data in integration planning. |

[View SKU Product Datasheet](#)[Request controlled 2D drawing](#)[Request controlled STEP review](#)[Request a Quote](#)

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-HG-S01-F25-R100 and is intended for dimensional evaluation and preliminary integration. It is not a applicable manufacturing drawing, reducer selection approval, bearing-load approval, lubrication specification, machinery risk assessment, safety validation or integration planning document and must not be used as the sole basis for machining, shaft or key manufacture, fastener selection, sealing, lubricant filling or final integration. Before design freeze, assembly or commissioning, verify all dimensions, datum geometry, fits, shaft and key interfaces, wave-generator retention, fastener engagement and tightening controls, torque and speed duty, shock cases, torsional accuracy and rigidity, external output loads, lubrication, sealing, temperature, contamination and maintenance requirements against the applicable EmbodyStack engineering data for this exact SKU. Where this guide and applicable product documentation differ, the applicable product documentation governs. Validate the complete reducer, motor, host structure, output load, motion cycle, guarding, fault cases and applicable regulatory requirements under intended operating conditions.