

ENGINEERING DOCUMENTATION

High-Torque Hollow Shaft Gear Unit

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-HG-S09-F25-R80	DRAFT-08 / 26 Aug 2026	Engineering Integration Reference

Integration Overview

Hollow-shaft harmonic gear gear unit with integrated product interfaces for the selected configuration for compact, coaxial, high-ratio rotary axes. This guide supports host-interface design, wave-generator input integration, mounting alignment, load-cycle validation, torsional behavior, lubrication, sealing and commissioning for ES-HG-S09-F25-R80.

Key Integration Facts

INTEGRATION ITEM	PUBLISHED VALUE
Rated Torque	82 Nm
Instantaneous Maximum Torque	332 Nm
Start/Stop Peak Torque	178 Nm
Reduction Ratio	80
Maximum Input Speed	5600 r/min
Frame Size	25
Weight	2.02 kg

VIEW	FIELD	VALUE
Mechanical View 1	Overall length	55.5 mm
	Middle section length	43.5 mm
	Right section length	6 mm
	Left section length	26 mm
	Lower left section length	10.5 mm
	Right section length	8.5 mm
	Outer mounting hole diameter with tolerance	Ø10 H7
	Outer mounting hole diameter with tolerance	Ø15 h7
	Inner hole diameter with tolerance (upper right)	Ø9 H7
	Inner hole diameter with tolerance (lower left)	Ø9 H7
	Middle hole diameter with tolerance	Ø10 h7
	Middle hole diameter with tolerance	Ø8 h7
	Middle ring diameter	Ø0
	Center section length	23 mm
	Lower left end length	10 mm
Mechanical View 2	Flange mounting threaded holes	6 × M3 threaded holes
	Pitch circle diameter of mounting holes	DP6 (likely designation or reference code)
	Center bore diameter	Ø3.5 mm
	Outer mounting holes	12 × Ø4.5 mm holes
	Flange outer diameter	Ø20 mm
Mechanical View 3	Outer circle threaded holes (M4)	16 holes, M4 thread, tap depth 8 mm
	Outer circle through holes (Ø4.5)	16 holes, Ø4.5 mm, through depth 15.5 mm
	Outer circle diameter	Ø7 mm
	Inner circle diameter	Ø3.5 mm
	Inner circle threaded holes (M3)	6 holes, M3 thread, tap depth 6 mm

Overall Dimensions and Input Interface

PARAMETER	PUBLISHED VALUE	UNIT
Frame Size	25	
Weight	2.02	kg

- Confirm the selected series, frame size and ratio before using dimensions or interface geometry. Do not substitute a nearby frame or product form.
- Design the input shaft, key, effective engagement and axial retention to transmit the verified torque without uncontrolled wave-generator axial movement.
- Reserve assembly, sealing, inspection and removal access around the input, housing and output interfaces.

Mounting, Alignment and Fastener Control

- Keep mounting faces flat, clean and free of burrs, raised holes, debris and coating buildup. Confirm reliefs and chamfers prevent interference.
- Seat the fixed and flexible gear members in the host structure before inserting the wave generator. Do not force engagement in a misaligned condition.
- Control concentricity, tilt and axial position of the input and housing datums. Insert the wave generator smoothly without excessive force on its bearing.
- Tighten fasteners in a staged diagonal sequence using the applicable torque and locking specification. Verify free, even rotation during assembly.

Torque, Speed and Duty Boundaries

PARAMETER	PUBLISHED VALUE	UNIT
Rated Torque	82	N·m
Allowable Average Torque	113	N·m
Start/Stop Peak Torque	178	N·m
Instantaneous Maximum Torque	332	N·m
Maximum Input Speed	5600	r/min
Average Input Speed	3500	r/min
Design Life	15000	h

- Calculate average torque and average input speed from the complete acceleration, constant-speed, deceleration, dwell and reversal cycle.
- Treat start/stop peak and instantaneous maximum torque as transient boundaries. Do not use either value as a continuous operating point.
- Validate design life against actual torque, speed, shock frequency, lubrication, temperature, alignment and external loading.

Published Torque, Speed and Life Boundaries

PARAMETER	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Rated Torque	82 N·m	Use as the selected continuous output rating under validated duty and thermal conditions.
Allowable Average Torque	113 N·m	Calculate the actual time-weighted output torque over the complete cycle.
Start/Stop Peak Torque	178 N·m	Transient start/stop boundary; include acceleration and deceleration events.
Instantaneous Maximum Torque	332 N·m	Short-duration shock boundary only; do not use as a normal operating point.
Maximum Input Speed	5600 r/min	Maximum input-speed boundary; also verify motor and thermal limits.
Average Input Speed	3500 r/min	Validate the time-weighted average input speed over the complete duty cycle.
Design Life	15000 h	Design reference only; actual life depends on torque, speed, shock, lubrication and installation.

Transmission Accuracy and Torsional Rigidity

PARAMETER	PUBLISHED VALUE	UNIT
Angle Transmission Accuracy	1	arcmin
Hysteresis Loss	1	arcmin
Torsional Rigidity K1	3.1	$\times 10^4 \text{Nm/rad}$
Torsional Rigidity K2	5	$\times 10^4 \text{Nm/rad}$
Torsional Rigidity K3	5.7	$\times 10^4 \text{Nm/rad}$
Torsional Rigidity T1	14	Nm
Torsional Rigidity T2	48	Nm

- Installed positioning performance depends on reducer behavior, datum control, fastener distortion, motor and encoder errors, host stiffness and thermal growth.
- Use the published stiffness regions and transition torques when evaluating compliance, resonance, control gain and direction reversal.

Published Accuracy and Torsional Rigidity Boundaries

PARAMETER	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Angle Transmission Accuracy	1 arcmin	Installed system accuracy also depends on datum, encoder, motor and structural errors.
Hysteresis Loss	1 arcmin	Include in direction-reversal and closed-loop positioning evaluation.
Torsional Rigidity K1	$3.1 \times 10^4 \text{Nm/rad}$	Applies to the published low-torque stiffness region.
Torsional Rigidity K2	$5 \times 10^4 \text{Nm/rad}$	Applies to the published intermediate stiffness region.
Torsional Rigidity K3	$5.7 \times 10^4 \text{Nm/rad}$	Applies to the published upper stiffness region.
Torsional Rigidity T1	14 Nm	Published transition torque for stiffness-region interpretation.
Torsional Rigidity T2	48 Nm	Published transition torque for stiffness-region interpretation.

Lubrication, Sealing and Thermal Control

- Use only the current lubricant, fill method and quantity for the exact configuration. Do not mix incompatible lubricants.
- Provide compatible static and dynamic sealing at the input, output and housing interfaces without distorting the reducer or restricting motion.
- Validate lubricant distribution and temperature for the installed orientation, speed, load cycle and enclosure.
- Prevent chips, fibers, cleaning residue, moisture and other contamination from entering the gear or bearing cavities during assembly and service.

Output Bearing and External Load Path

- Calculate radial, axial and moment loads at the output, including offset, acceleration, gravity, process force, impact and emergency-stop cases.
- Do not infer permissible external load from reducer torque capacity or frame size. Use applicable output-bearing data and safety criteria.
- Avoid forcing, impact, misalignment or host distortion through the output support bearing during installation and operation.

Integration Checklist

- 01 Confirm the drawing, published parameters and applicable assembly data identify this SKU.
- 02 Verify series, frame size, ratio, product form and input-interface dimensions.
- 03 Check mounting-face flatness, concentricity, tilt, chamfers, reliefs, cleanliness and support stiffness.
- 04 Verify input shaft, key, engagement length and axial wave-generator retention.
- 05 Assemble the fixed and flexible gear members before inserting the wave generator.
- 06 Use staged diagonal tightening and verify free, even rotation throughout assembly.
- 07 Calculate average, start/stop peak and shock torque over the complete operating cycle.
- 08 Validate average and maximum input speed, design life and installed thermal condition.
- 09 Evaluate backlash, angular accuracy, hysteresis and stiffness regions for the control system.
- 10 Confirm exact lubricant, fill quantity, orientation, sealing and contamination controls.
- 11 Validate output radial, axial and moment loads using applicable bearing data.
- 12 Include specified 2D, STEP, assembly, lubrication and bearing-load data in integration planning.

[View SKU Product Datasheet](#) [Request controlled 2D drawing](#) [Request controlled STEP review](#) [Request a Quote](#)

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-HG-S09-F25-R80 and is intended for dimensional evaluation and preliminary integration. It is not a applicable manufacturing drawing, reducer selection approval, bearing-load approval, lubrication specification, machinery risk assessment, safety validation or integration planning document and must not be used as the sole basis for machining, shaft or key manufacture, fastener selection, sealing, lubricant filling or final integration. Before design freeze, assembly or commissioning, verify all dimensions, datum geometry, fits, shaft and key interfaces, wave-generator retention, fastener engagement and tightening controls, torque and speed duty, shock cases, torsional accuracy and rigidity, external output loads, lubrication, sealing, temperature, contamination and maintenance requirements against the applicable EmbodyStack engineering data for this exact SKU. Where this guide and applicable product documentation differ, the applicable product documentation governs. Validate the complete reducer, motor, host structure, output load, motion cycle, guarding, fault cases and applicable regulatory requirements under intended operating conditions.