

ENGINEERING DOCUMENTATION

24-60 V Compact Servo Drive

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-SD-C01-S006-V003	DRAFT-08 / 29 Aug 2026	Engineering Integration Reference

Integration Overview


Compact low-voltage servo drive for cabinet-integrated motion control. This guide supports panel mounting, thermal planning, power and braking integration, signal routing, communication commissioning and enclosure boundary definition for ES-SD-C01-S006-V003.

Key Integration Facts


INTEGRATION ITEM	VALUE
Continuous Output Current Without Auxiliary Heatsink	5 Arms
Peak Output Current	12 A peak
Servo Drive AC Supply Voltage	24 to 60 VDC
Logic Supply Voltage	No separate logic-supply input listed VDC
Communication Protocol	RS232; RS485; Modbus RTU; Pulse
Weight	0.3 kg
Protection Class	IP20 except power terminals
Operating Temperature	0 to 40 °C

Product Structure & Views


These views present product structure, mounting interfaces and relevant integration geometry for this SKU.

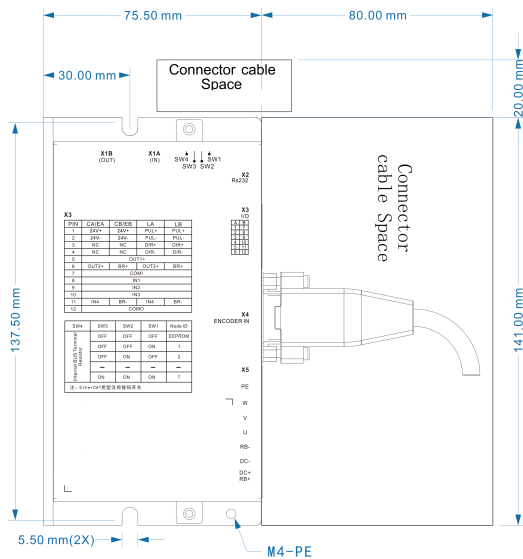

Mechanical View 1

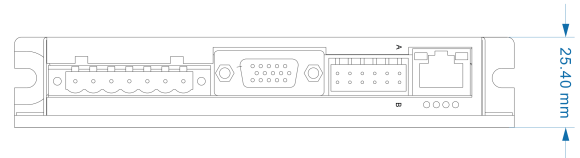


Mechanical View 2

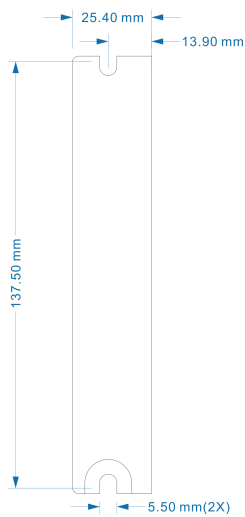


Hole position
for fixation

Mechanical View 3

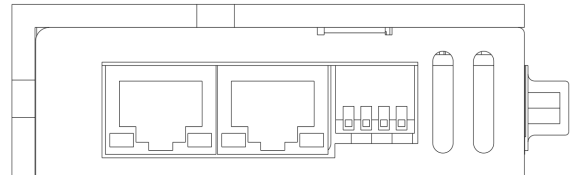

Mechanical View 4

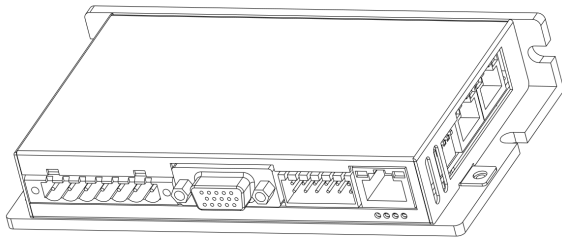

Mechanical View 5

VIEW	FIELD	VALUE
Mechanical View 1	Left-side horizontal width	75.50 mm
	Right-side horizontal width	80.00 mm
	Connector cable clearance space	Connector cable space
	Upper-left clearance/notch width	30.00 mm
	Upper vertical clearance	20.00 mm
	X1B connector identifier	X1B
	X1A connector identifier	X1A
	DIP switch identifiers	SW4, SW3, SW2, SW1
	Total height	137.50mm
	Bottom Mounting Slot Dimension	5.50 mm (2X)
	Grounding screw hole specification	M4 thread
	Total vertical height	141.00 mm
Mechanical View 2	Connector label A	Connector position/label A
	Front view height dimension	25.40 mm
	Connector label B	Connector position/label B
Mechanical View 3	Horizontal mounting hole position dimension	25.40 mm
	Horizontal mounting hole offset from side edge	13.90 mm
	Vertical mounting hole position dimension	137.50 mm
	Mounting hole or slot width quantity	5.50 mm, 2 places
	Hole position note for fixation	Hole position for fixation

Overall Dimensions and Panel Mounting

PARAMETER	VALUE	UNIT
Weight	0.3	kg
Installation Orientation	Vertical or horizontal	

- Mount the drive to a rigid, flat panel so the housing is not twisted and the thermal path remains repeatable.
- Use only a installation orientation and confirm connector access, conductor bend radius and service removal space before releasing the panel layout.
- Keep terminal and connector approach zones accessible without forcing cables against adjacent devices or the enclosure.

Thermal Management and Clearance

PARAMETER	VALUE	UNIT
Continuous Output Current Without Auxiliary Heatsink	5	Arms
Supported Motor Power Range	50 to 3000	W
Operating Temperature	0 to 40	°C

- Preserve natural or forced airflow around the drive and do not obstruct heat-transfer surfaces with cable bundles, covers or adjacent heat sources.
- Validate continuous current, auxiliary heat sinking, enclosure temperature, altitude and duty cycle together; use applicable derating data when any boundary is approached.
- Separate the drive from braking resistors, power supplies and other concentrated heat sources unless the complete thermal design has been verified.

Power, Braking and Protective Integration

PARAMETER	VALUE	UNIT
Servo Drive AC Supply Voltage	24 to 60	VDC
Logic Supply Voltage	No separate logic-supply input listed	
Peak Output Current	12	A peak
Braking Absorption Voltage	73 ±2 V	VDC
Overvoltage Alarm Voltage	83 ±2 V	
Undervoltage Alarm Voltage	18 ±2 V	
Protection Functions	Overvoltage; Undervoltage; Motor overtemperature (FT); Short circuit; Drive overtemperature	

- Before energization, verify power and logic supply ranges, polarity, protective devices, conductor ratings and discharge state against applicable terminal documentation.
- Size and locate any external braking element for the actual regenerative energy, duty cycle and enclosure thermal conditions; keep hot components clear of wiring and heat-sensitive devices.

Electrical Boundaries

BOUNDARY	VALUE	INTEGRATION REQUIREMENT
Power input	24 to 60 VDC	Coordinate the host supply, wiring and protective strategy with this exact-SKU boundary.
Peak output current	12 A peak	
Braking absorption threshold	73 ±2 V VDC	
Overvoltage alarm threshold	83 ±2 V VDC	
Undervoltage alarm threshold	18 ±2 V VDC	

I/O, Feedback and Communication Interfaces

PARAMETER	VALUE	UNIT
Communication Protocol	RS232; RS485; Modbus RTU; Pulse	
Control Method	RS232, RS485 and pulse	
Digital I/O	4 digital inputs; 2 digital outputs; brake-motor variants use 1 digital output	
Digital Input Count	4	
Digital Output Count	2	
Pulse Input Voltage	3.3 to 24	VDC
Feedback Signal Support	2500 P/R incremental differential 5 V encoder; Magnetic encoder; Resolver	

- Do not infer terminal or connector pin assignments from this guide. Use the applicable wiring and communication documentation for the exact SKU.
- Confirm voltage levels, input type, output loading, pulse frequency, feedback protocol and communication termination against the connected controller and motor.
- Commission one command and feedback path at a time, then verify direction, scaling, status handling and fault response before enabling coordinated motion.

Grounding, EMC and Cable Routing

- Bond the drive, mounting panel and enclosure through a low-impedance protective and functional grounding architecture sized for the installation.
- Route power and motor conductors separately from encoder, analog, pulse and communication wiring; cross dissimilar cable groups only where necessary.
- Terminate shields and cable clamps using the qualified EMC architecture, with short low-impedance connections and defined cabinet entry.

Operating and Enclosure Conditions

PARAMETER	VALUE	UNIT
Protection Class	IP20 except power terminals	
Installation Environment	Dry, dust-free enclosed location such as an electrical cabinet	
Atmospheric Pressure	86 to 106	kPa
Operating Temperature	0 to 40	°C
Installation Orientation	Vertical or horizontal	

- Treat the component and terminal ratings as local boundaries. The host enclosure must provide the required access control, ingress protection, contamination control and thermal environment.

Ingress and Enclosure Boundaries

BOUNDARY	CONDITION	INTEGRATION REQUIREMENT
Drive housing	IP20 except power terminals	Do not treat the component rating as the protection rating of the completed control assembly.
Power terminal zone	Verify terminal-zone protection	Contain access within the host enclosure and maintain required electrical clearances and service controls.
Host electrical enclosure	Dry, dust-free enclosed location such as an electrical cabinet	Validate enclosure ingress protection, contamination control, thermal management and cable entry for the installed environment.

Commissioning and Safety Functions

- Before power-up, inspect mounting, protective bonding, terminal torque, conductor routing, polarity, motor and feedback compatibility, and enclosure clearances.
- Commission with the mechanism unloaded or restrained as appropriate, conservative current and motion limits, and a verified stop path before normal operation.
- Any safety input or safe-torque function used by the selected configuration must be integrated and validated as part of the machine safety design; this guide does not define safety performance or terminal assignments.

Integration Checklist

- | | |
|----|---|
| 01 | Confirm that the 2D drawing, parameter set and applicable wiring data all identify ES-SD-C01-S006-V003. |
| 02 | Verify housing dimensions, mounting points, orientation, connector approach and service removal space. |
| 03 | Confirm enclosure protection, contamination control, ambient temperature, altitude and thermal derating requirements. |
| 04 | Verify power and logic supply ranges, polarity, protective devices, conductor ratings and discharge controls. |
| 05 | Validate continuous and peak current requirements together with auxiliary heat sinking and the machine duty cycle. |
| 06 | Confirm braking-energy handling, resistor rating, placement, guarding and thermal separation where applicable. |
| 07 | Verify motor, brake and feedback compatibility before connecting the load. |
| 08 | Confirm digital, analog, pulse and communication interface levels, loading, addressing and termination. |
| 09 | Complete protective bonding, shield termination and power-versus-signal cable segregation. |
| 10 | Validate safe-state behavior, stop path and any safety function within the complete machine safety design. |
| 11 | Commission under defined motion limits and verify direction, scaling, feedback, status and fault response. |
| 12 | Request current 2D, STEP, terminal, wiring and communication data before integration planning. |

[View SKU Product Datasheet](#)[Request controlled 2D drawing](#)[Request controlled STEP review](#)[Request a Quote](#)

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-SD-C01-S006-V003 and is intended for dimensional evaluation and preliminary integration. It is not a specified installation manual, wiring diagram, terminal assignment, safety manual or manufacturing drawing and must not be used as the sole basis for panel fabrication, conductor sizing, protective-device selection, braking-resistor design, safety validation or integration planning. Before design freeze or energization, verify dimensions, mounting orientation, ventilation and derating requirements, power and logic supply limits, terminal assignments, conductor and protective bonding requirements, motor and feedback compatibility, braking-energy management, communication settings, safe-state behavior, enclosure protection and environmental limits against the applicable EmbodyStack engineering data for this exact SKU. Where this guide and applicable product documentation differ, the applicable product documentation governs. Validate the complete machine under its intended supply conditions, load cycle, fault cases, environment and applicable regulatory requirements.