

ENGINEERING DOCUMENTATION

24-60 V Compact Servo Drive

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-SD-C01-S009-V001	DRAFT-08 / 29 Aug 2026	Engineering Integration Reference

Integration Overview


Compact low-voltage servo drive for cabinet-integrated motion control. This guide supports panel mounting, thermal planning, power and braking integration, signal routing, communication commissioning and enclosure boundary definition for ES-SD-C01-S009-V001.

Key Integration Facts

INTEGRATION ITEM	VALUE
Continuous Output Current Without Auxiliary Heatsink	12 Arms
Peak Output Current	48 A peak
Servo Drive AC Supply Voltage	72 to 110 VDC
Logic Supply Voltage	24 VDC
Communication Protocol	RS485; Modbus RTU; CANopen; Pulse
Weight	1.68 kg
Protection Class	IP20; X5 power terminal is IP00
Operating Temperature	-20 to 40 °C

Product Structure & Views


These views present product structure, mounting interfaces and relevant integration geometry for this SKU.

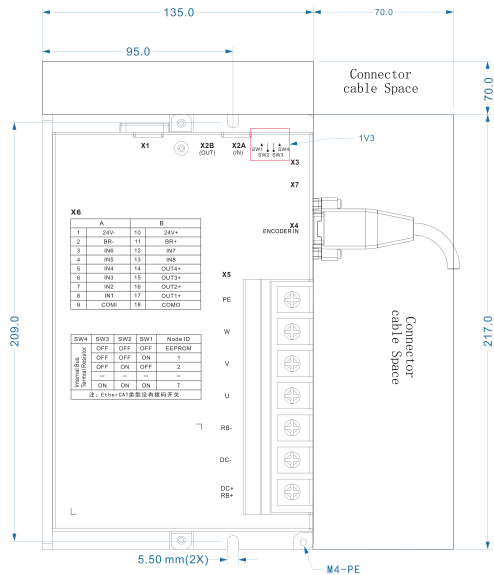


Mechanical View 1




Mechanical View 2

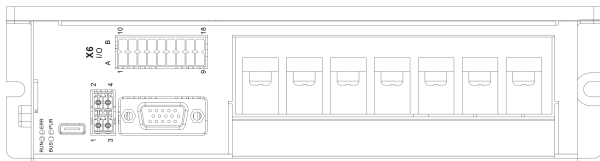

Mechanical View 3

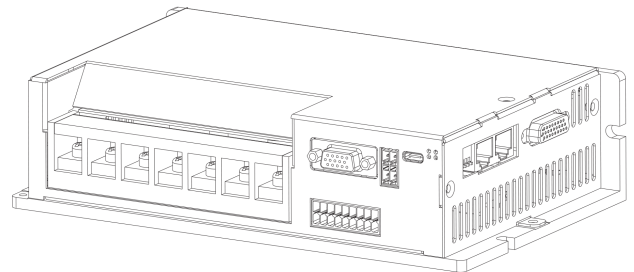

Mechanical View 4

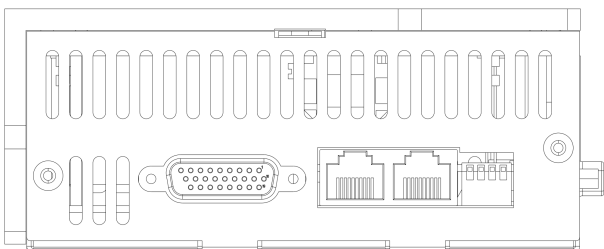

Mechanical View 5

VIEW	FIELD	VALUE
Mechanical View 1	Total Width	135.0 mm
	Connector Area Width	70.0 mm
	Left Area Width	95.0 mm
	Connector Cable Space Height	70.0 mm
	Total Height	209.0 mm
	Right Side Total Height	217.0 mm
	Mounting Hole Position and Spec	5.50 mm diameter, 2 holes
	Ground Thread	M4 thread for PE ground
	Connector cable routing space	Reserved space for connector cable routing
Mechanical View 2	Fixation hole diameter	Φ5.50 mm, 2 places
	Vertical mounting hole spacing 1	57.0 mm
	Vertical mounting hole spacing 2	55.0 mm
	Vertical mounting hole spacing 3	30.0 mm
	Overall horizontal length	209.0 mm
	View description	Hole position for fixation
Mechanical View 3	X6 connector identifier	X6 I/O connector
	X6 row B identifier	Connector row B
	X6 row A identifier	Connector row A
	X6 row B terminal numbering range	Row B terminals 10 to 18
	Small terminal upper numbering	Upper terminals 2 and 4
	Small terminal lower numbering	Lower terminal 3
	Status indicator labels	Status indicators: RUN, ERR, BUS, PUR
	Small terminal lower numbering	Lower terminal 1
	X6 row A right-end terminal number	Row A right-end terminal 1-9
Mechanical View 5	D-sub connector pin index labels	Connector pin index labels 1, 10, and 19

Overall Dimensions and Panel Mounting

PARAMETER	VALUE	UNIT
Weight	1.68	kg
Installation Orientation	Vertical or horizontal	

- Mount the drive to a rigid, flat panel so the housing is not twisted and the thermal path remains repeatable.
- Use only a installation orientation and confirm connector access, conductor bend radius and service removal space before releasing the panel layout.
- Keep terminal and connector approach zones accessible without forcing cables against adjacent devices or the enclosure.

Thermal Management and Clearance

PARAMETER	VALUE	UNIT
Continuous Output Current Without Auxiliary Heatsink	12	Arms
Supported Motor Power Range	750 to 1000	W
Logic Power Loss	4000	mW
Operating Temperature	-20 to 40	°C

- Preserve natural or forced airflow around the drive and do not obstruct heat-transfer surfaces with cable bundles, covers or adjacent heat sources.
- Validate continuous current, auxiliary heat sinking, enclosure temperature, altitude and duty cycle together; use applicable derating data when any boundary is approached.
- Separate the drive from braking resistors, power supplies and other concentrated heat sources unless the complete thermal design has been verified.

Power, Braking and Protective Integration

PARAMETER	VALUE	UNIT
Servo Drive AC Supply Voltage	72 to 110	VDC
Logic Supply Voltage	24	
Logic Supply Current	3	A
Peak Output Current	48	A peak
Braking Absorption Voltage	115 ±2 V	VDC
Overvoltage Alarm Voltage	120 ±2 V	
Undervoltage Alarm Voltage	60 ±2 V	
Protection Functions	Overvoltage; Undervoltage; Motor overtemperature (FT); Short circuit; Drive overtemperature	

- Before energization, verify power and logic supply ranges, polarity, protective devices, conductor ratings and discharge state against applicable terminal documentation.
- Size and locate any external braking element for the actual regenerative energy, duty cycle and enclosure thermal conditions; keep hot components clear of wiring and heat-sensitive devices.

Electrical Boundaries

BOUNDARY	VALUE	INTEGRATION REQUIREMENT
Power input	72 to 110 VDC	Coordinate the host supply, wiring and protective strategy with this exact-SKU boundary.
Peak output current	48 A peak	
Braking absorption threshold	115 ±2 V VDC	
Overvoltage alarm threshold	120 ±2 V VDC	
Undervoltage alarm threshold	60 ±2 V VDC	

I/O, Feedback and Communication Interfaces

PARAMETER	VALUE	UNIT
Communication Protocol	RS485; Modbus RTU; CANopen; Pulse	
Control Method	RS485, CANopen, STO and pulse	
Digital I/O	8 digital inputs; 4 digital outputs	
Digital Input Count	8	
Digital Output Count	4	
Analog Input Count	2	
Analog Input Range	-10 to +10	V
Pulse Input Voltage	12 to 24	VDC
Feedback Signal Support	Tamagawa serial protocol; Incremental encoder	
Brake Output Current	2	A

- Do not infer terminal or connector pin assignments from this guide. Use the applicable wiring and communication documentation for the exact SKU.
- Confirm voltage levels, input type, output loading, pulse frequency, feedback protocol and communication termination against the connected controller and motor.
- Commission one command and feedback path at a time, then verify direction, scaling, status handling and fault response before enabling coordinated motion.

Grounding, EMC and Cable Routing

- Bond the drive, mounting panel and enclosure through a low-impedance protective and functional grounding architecture sized for the installation.
- Route power and motor conductors separately from encoder, analog, pulse and communication wiring; cross dissimilar cable groups only where necessary.
- Terminate shields and cable clamps using the qualified EMC architecture, with short low-impedance connections and defined cabinet entry.

Operating and Enclosure Conditions

PARAMETER	VALUE	UNIT
Protection Class	IP20; X5 power terminal is IP00	
Installation Environment	Dry, dust-free enclosed location such as an electrical cabinet	
Atmospheric Pressure	86 to 106	kPa
Operating Temperature	-20 to 40	°C
Installation Orientation	Vertical or horizontal	

- Treat the component and terminal ratings as local boundaries. The host enclosure must provide the required access control, ingress protection, contamination control and thermal environment.

Ingress and Enclosure Boundaries

BOUNDARY	CONDITION	INTEGRATION REQUIREMENT
Drive housing	IP20; X5 power terminal is IP00	Do not treat the component rating as the protection rating of the completed control assembly.
Power terminal zone	IP00 at the identified power terminal zone	Contain access within the host enclosure and maintain required electrical clearances and service controls.
Host electrical enclosure	Dry, dust-free enclosed location such as an electrical cabinet	Validate enclosure ingress protection, contamination control, thermal management and cable entry for the installed environment.

Commissioning and Safety Functions

- Before power-up, inspect mounting, protective bonding, terminal torque, conductor routing, polarity, motor and feedback compatibility, and enclosure clearances.
- Commission with the mechanism unloaded or restrained as appropriate, conservative current and motion limits, and a verified stop path before normal operation.
- Any safety input or safe-torque function used by the selected configuration must be integrated and validated as part of the machine safety design; this guide does not define safety performance or terminal assignments.

Integration Checklist

- | | |
|----|---|
| 01 | Confirm that the 2D drawing, parameter set and applicable wiring data all identify ES-SD-C01-S009-V001. |
| 02 | Verify housing dimensions, mounting points, orientation, connector approach and service removal space. |
| 03 | Confirm enclosure protection, contamination control, ambient temperature, altitude and thermal derating requirements. |
| 04 | Verify power and logic supply ranges, polarity, protective devices, conductor ratings and discharge controls. |
| 05 | Validate continuous and peak current requirements together with auxiliary heat sinking and the machine duty cycle. |
| 06 | Confirm braking-energy handling, resistor rating, placement, guarding and thermal separation where applicable. |
| 07 | Verify motor, brake and feedback compatibility before connecting the load. |
| 08 | Confirm digital, analog, pulse and communication interface levels, loading, addressing and termination. |
| 09 | Complete protective bonding, shield termination and power-versus-signal cable segregation. |
| 10 | Validate safe-state behavior, stop path and any safety function within the complete machine safety design. |
| 11 | Commission under defined motion limits and verify direction, scaling, feedback, status and fault response. |
| 12 | Request current 2D, STEP, terminal, wiring and communication data before integration planning. |

[View SKU Product Datasheet](#)[Request controlled 2D drawing](#)[Request controlled STEP review](#)[Request a Quote](#)

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-SD-C01-S009-V001 and is intended for dimensional evaluation and preliminary integration. It is not a specified installation manual, wiring diagram, terminal assignment, safety manual or manufacturing drawing and must not be used as the sole basis for panel fabrication, conductor sizing, protective-device selection, braking-resistor design, safety validation or integration planning. Before design freeze or energization, verify dimensions, mounting orientation, ventilation and derating requirements, power and logic supply limits, terminal assignments, conductor and protective bonding requirements, motor and feedback compatibility, braking-energy management, communication settings, safe-state behavior, enclosure protection and environmental limits against the applicable EmbodyStack engineering data for this exact SKU. Where this guide and applicable product documentation differ, the applicable product documentation governs. Validate the complete machine under its intended supply conditions, load cycle, fault cases, environment and applicable regulatory requirements.