

ENGINEERING DOCUMENTATION

Medium-Power Servo Drive

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-SD-C21-S003-V007	DRAFT-08 / 26 Aug 2026	Engineering Integration Reference

Integration Overview


AC medium-power servo drive for cabinet-integrated motion control. This guide supports panel mounting, thermal planning, power and braking integration, signal routing, communication commissioning and enclosure boundary definition for ES-SD-C21-S003-V007.

Key Integration Facts


INTEGRATION ITEM	PUBLISHED VALUE
Servo Drive AC Supply Voltage	3-phase 200–240 VAC±10%, 50/60 Hz±3 Hz
Logic Supply Voltage	1PH 200VAC–240VAC±10%50/60Hz±3Hz VDC
Communication Protocol	RS232; EtherCAT; CoE CiA 402; Pulse train

Product Structure & Views

These views present product structure, mounting interfaces and relevant integration geometry for this SKU.

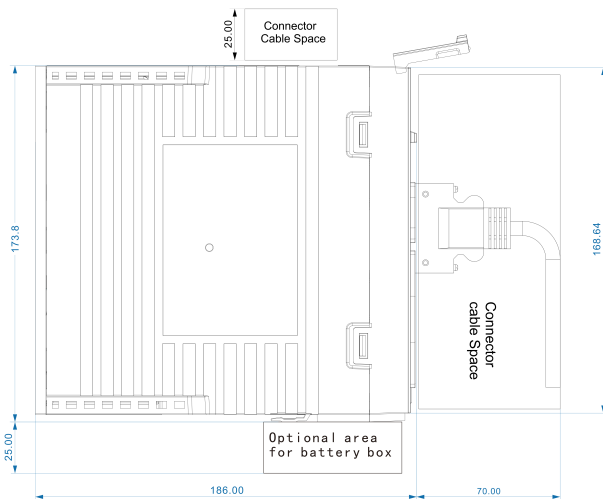


Mechanical View 1

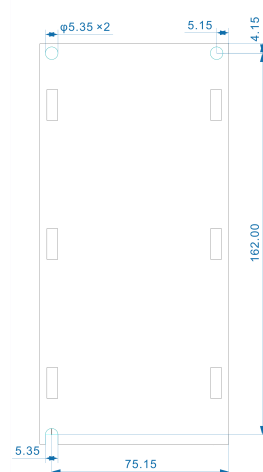


Hole position
for fixation


Mechanical View 2

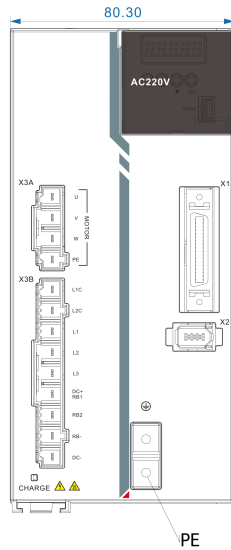

Mechanical View 3

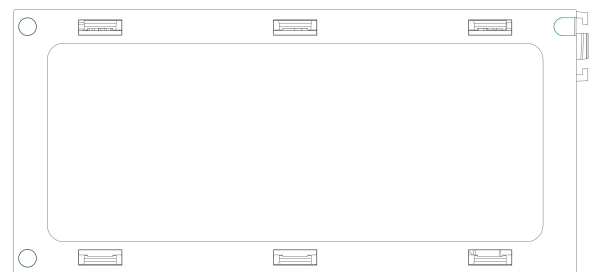

Mechanical View 4

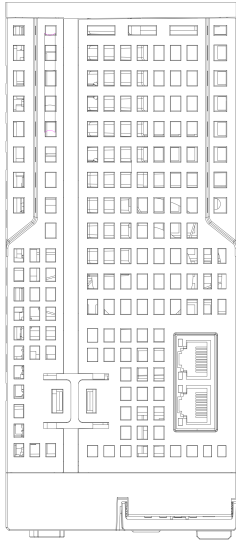

Mechanical View 5

VIEW	FIELD	VALUE
Mechanical View 1	Top connector cable space height	25.00 mm
	Main body height	173.8 mm
	Right-side assembly height	168.64 mm
	Right-side connector cable space	Connector cable space area indicated; numeric size not specified in this callout
	Optional battery box area	Optional area for battery box
	Optional battery box area height	25.00 mm
	Main body length	186.00 mm
	Right connector/cable space length	70.00 mm
Mechanical View 2	Fixation hole diameter and quantity	2 holes, diameter 5.35
	Top hole center offset from right edge	5.15 from right edge to top hole center
	Top hole center offset from top edge	4.15 from top edge to top hole center
	Vertical center distance between fixation holes	162.00 vertical center distance between fixation holes
	Bottom hole center offset from left edge	5.35 from left edge to bottom hole center
	Horizontal center distance between fixation holes	75.15 horizontal center distance between fixation holes
	Region label	Hole position for fixation
Mechanical View 3	Front panel width	Width 80.30 mm
	AC input voltage label	AC 220 V input label
	SET button label	SET button
	RS232 communication interface	RS232 interface
	X3A motor terminal connector	X3A motor connector: U, V, W, PE
	X3B power and DC bus terminal connector	X3B connector labels include L1C, L2C, L1, L2, L3, DC+
	X1 connector	X1 connector
	X2 connector	X2 connector

Overall Dimensions and Panel Mounting

- Mount the drive to a rigid, flat panel so the housing is not twisted and the thermal path remains repeatable.
- Use only a published installation orientation and confirm connector access, conductor bend radius and service removal space before releasing the panel layout.
- Keep terminal and connector approach zones accessible without forcing cables against adjacent devices or the enclosure.

Thermal Management and Clearance

- Preserve natural or forced airflow around the drive and do not obstruct heat-transfer surfaces with cable bundles, covers or adjacent heat sources.
- Validate continuous current, auxiliary heat sinking, enclosure temperature, altitude and duty cycle together; use applicable derating data when any boundary is approached.
- Separate the drive from braking resistors, power supplies and other concentrated heat sources unless the complete thermal design has been verified.

Power, Braking and Protective Integration

PARAMETER	PUBLISHED VALUE	UNIT
Servo Drive AC Supply Voltage	3-phase 200–240 VAC $\pm$ 10%, 50/60 Hz $\pm$ 3 Hz	
Logic Supply Voltage	1PH 200VAC–240VAC $\pm$ 10%50/60Hz $\pm$ 3Hz	VDC
Braking Absorption Voltage	DC380V $\pm$ 5V	VDC
Overvoltage Alarm Voltage	DC400V $\pm$ 5V	VDC
Undervoltage Alarm Voltage	DC200V $\pm$ 5V	VDC

- Before energization, verify power and logic supply ranges, polarity, protective devices, conductor ratings and discharge state against applicable terminal documentation.
- Size and locate any external braking element for the actual regenerative energy, duty cycle and enclosure thermal conditions; keep hot components clear of wiring and heat-sensitive devices.

Published Electrical Boundaries

BOUNDARY	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Power input	3-phase 200–240 VAC $\pm$ 10%, 50/60 Hz $\pm$ 3 Hz	Coordinate the host supply, wiring and protective strategy with this exact-SKU boundary.
Braking absorption threshold	DC380V $\pm$ 5V VDC	Coordinate the host supply, wiring and protective strategy with this exact-SKU boundary.
Overvoltage alarm threshold	DC400V $\pm$ 5V VDC	Coordinate the host supply, wiring and protective strategy with this exact-SKU boundary.
Undervoltage alarm threshold	DC200V $\pm$ 5V VDC	Coordinate the host supply, wiring and protective strategy with this exact-SKU boundary.

I/O, Feedback and Communication Interfaces

PARAMETER	PUBLISHED VALUE	UNIT
Communication Protocol	RS232; EtherCAT; CoE CiA 402; Pulse train	

- Do not infer terminal or connector pin assignments from this guide. Use the applicable wiring and communication documentation for the exact SKU.
- Confirm voltage levels, input type, output loading, pulse frequency, feedback protocol and communication termination against the connected controller and motor.
- Commission one command and feedback path at a time, then verify direction, scaling, status handling and fault response before enabling coordinated motion.

Grounding, EMC and Cable Routing

- Bond the drive, mounting panel and enclosure through a low-impedance protective and functional grounding architecture sized for the installation.
- Route power and motor conductors separately from encoder, analog, pulse and communication wiring; cross dissimilar cable groups only where necessary.
- Terminate shields and cable clamps using the qualified EMC architecture, with short low-impedance connections and defined cabinet entry.

Operating and Enclosure Conditions

- Treat the published component and terminal ratings as local boundaries. The host enclosure must provide the required access control, ingress protection, contamination control and thermal environment.

Ingress and Enclosure Boundaries

BOUNDARY	PUBLISHED CONDITION	INTEGRATION REQUIREMENT
Drive housing	Verify against applicable product documentation	Do not treat the component rating as the protection rating of the completed control assembly.
Power terminal zone	Verify terminal-zone protection	Contain access within the host enclosure and maintain required electrical clearances and service controls.
Host electrical enclosure	Select the host enclosure for the application environment	Validate enclosure ingress protection, contamination control, thermal management and cable entry for the installed environment.

Commissioning and Safety Functions

- Before power-up, inspect mounting, protective bonding, terminal torque, conductor routing, polarity, motor and feedback compatibility, and enclosure clearances.
- Commission with the mechanism unloaded or restrained as appropriate, conservative current and motion limits, and a verified stop path before normal operation.
- Any safety input or safe-torque function used by the selected configuration must be integrated and validated as part of the machine safety design; this guide does not define safety performance or terminal assignments.

Integration Checklist

- | | |
|----|---|
| 01 | Confirm that the 2D drawing, published parameter set and applicable wiring data all identify ES-SD-C21-S003-V007. |
| 02 | Verify housing dimensions, mounting points, orientation, connector approach and service removal space. |
| 03 | Confirm enclosure protection, contamination control, ambient temperature, altitude and thermal derating requirements. |
| 04 | Verify power and logic supply ranges, polarity, protective devices, conductor ratings and discharge controls. |
| 05 | Validate continuous and peak current requirements together with auxiliary heat sinking and the machine duty cycle. |
| 06 | Confirm braking-energy handling, resistor rating, placement, guarding and thermal separation where applicable. |
| 07 | Verify motor, brake and feedback compatibility before connecting the load. |
| 08 | Confirm digital, analog, pulse and communication interface levels, loading, addressing and termination. |
| 09 | Complete protective bonding, shield termination and power-versus-signal cable segregation. |
| 10 | Validate safe-state behavior, stop path and any safety function within the complete machine safety design. |
| 11 | Commission under defined motion limits and verify direction, scaling, feedback, status and fault response. |
| 12 | Request current 2D, STEP, terminal, wiring and communication data before integration planning. |

[View SKU Product Datasheet](#) [Request controlled 2D drawing](#) [Request controlled STEP review](#) [Request a Quote](#)

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-SD-C21-S003-V007 and is intended for dimensional evaluation and preliminary integration. It is not a specified installation manual, wiring diagram, terminal assignment, safety manual or manufacturing drawing and must not be used as the sole basis for panel fabrication, conductor sizing, protective-device selection, braking-resistor design, safety validation or integration planning. Before design freeze or energization, verify dimensions, mounting orientation, ventilation and derating requirements, power and logic supply limits, terminal assignments, conductor and protective bonding requirements, motor and feedback compatibility, braking-energy management, communication settings, safe-state behavior, enclosure protection and environmental limits against the applicable EmbodyStack engineering data for this exact SKU. Where this guide and applicable product documentation differ, the applicable product documentation governs. Validate the complete machine under its intended supply conditions, load cycle, fault cases, environment and applicable regulatory requirements.