

ENGINEERING DOCUMENTATION

Cup Component Set

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-HG-S01-F14-R50	DRAFT-08 / 26 Aug 2026	Engineering Integration Reference

Integration Overview





Cup-form harmonic gear component set requiring specified host housing, support-bearing and sealing integration for compact, coaxial, high-ratio rotary axes. This guide supports host-interface design, wave-generator input integration, mounting alignment, load-cycle validation, torsional behavior, lubrication, sealing and commissioning for ES-HG-S01-F14-R50.


Key Integration Facts

INTEGRATION ITEM	PUBLISHED VALUE
Rated Torque	5.4 Nm
Instantaneous Maximum Torque	35 Nm
Start/Stop Peak Torque	18 Nm
Backlash	±0 arc sec
Reduction Ratio	50
Maximum Input Speed	8500 r/min
Frame Size	14
Weight	0.09 kg


Product Structure & Views

These views present the selected product structure, mounting interfaces and relevant integration geometry for this SKU.

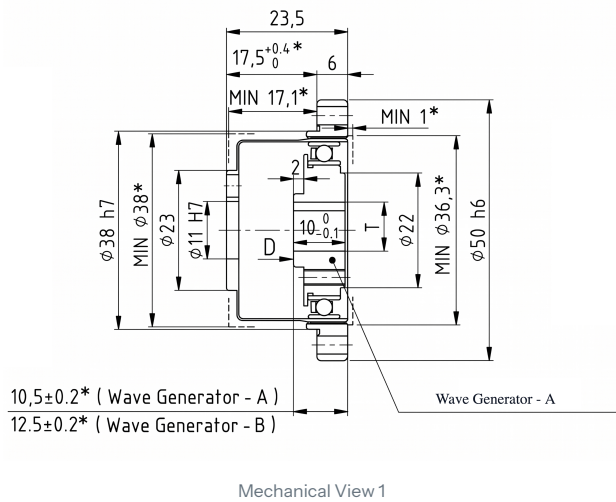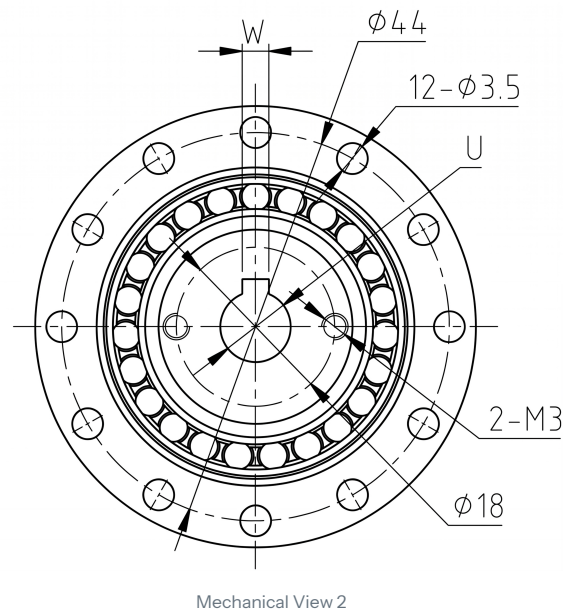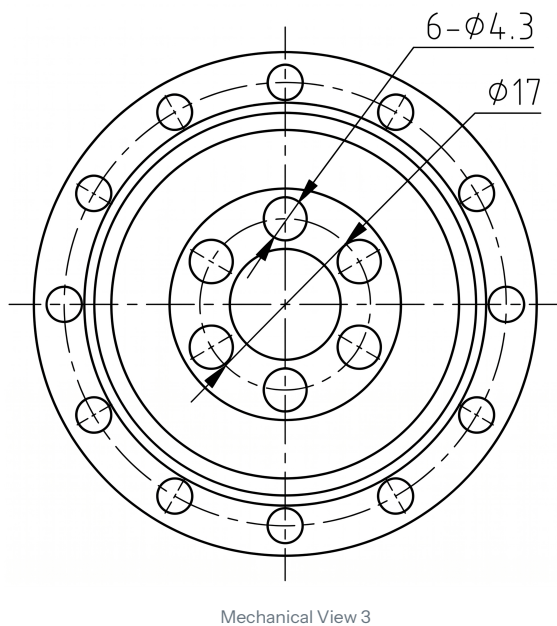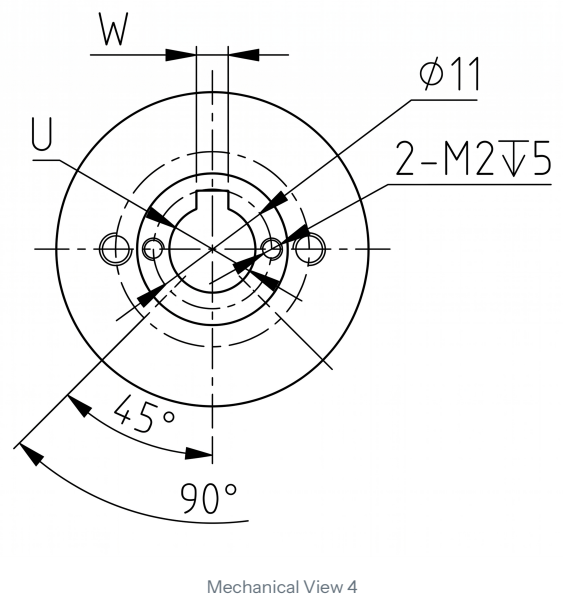

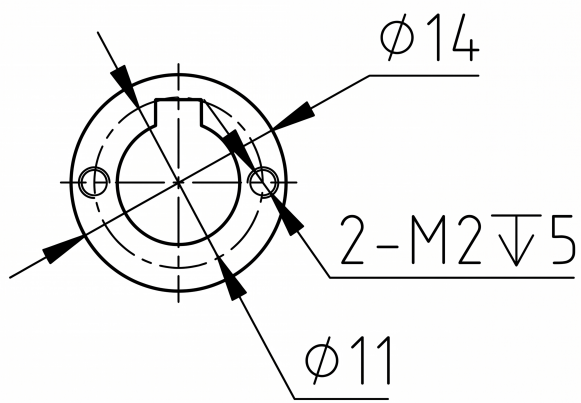

Mechanical View 5

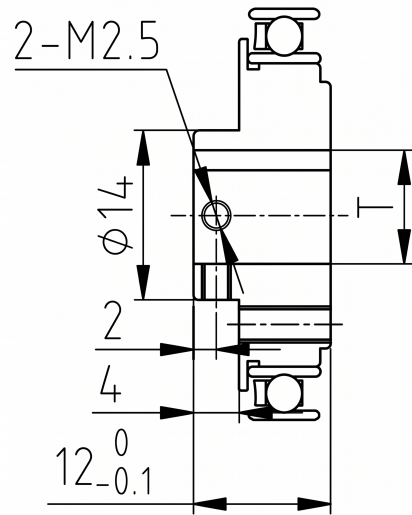

Mechanical View 6

VIEW	FIELD	VALUE
Mechanical View 1	Overall Length	23.5 mm
	Mounting Length with Tolerance	17.5 +0.4/0 mm
	End Section Length	6 mm
	Minimum Mounting Length	MIN 17.1 mm
	Minimum Step Height	MIN 1 mm
	Feature Count or Width	2 mm or 2x
	Inner Diameter with Tolerance	10 0/-0.1 mm
	Datum D	Datum D
	Parameter T	T (see specification table)
	Shaft Diameter h7 Fit	Ø8 h7
	Minimum Shaft Diameter	MIN Ø8 mm
	Internal Shaft Diameter	Ø3 mm
	Center Bore Diameter H7 Fit	Ø1 H7
	Internal Diameter	Ø2 mm
	Minimum Outer Diameter	MIN Ø6.3 mm
	Mounting Outer Diameter h6 Fit	Ø0 h6
	Wave Generator-A Variant Dimension	10.5±0.2 mm (Wave Generator-A)
	Wave Generator-B Variant Dimension	12.5±0.2 mm (Wave Generator-B)
Mechanical View 2	Outer mounting circle diameter	Ø4
	Hole pattern: quantity and diameter	12 holes × Ø.5
	Width dimension label	W (dimension label)
	Dimension label U	U (dimension label)
	Threaded hole specification and quantity	2 × M3 threaded holes
	Center hole diameter	Ø8
Mechanical View 3	Mounting hole quantity and diameter	6 holes, Ø.3
	Bolt circle diameter (PCD)	Ø7
Mechanical View 4	Width	W (variable dimension)
	Center hole diameter	Ø1
	U dimension	U (variable dimension)
	Mounting threaded holes	2 holes, M2 thread, depth 5mm
	Angular positioning	45°
	Angular span	90°
Mechanical View 5	Outer diameter	Ø4
	Threaded hole specification and quantity	2 × M2 threaded holes, depth 5mm
	Center hole diameter	Ø1
Mechanical View 6	Mounting threaded hole	2 holes M2.5 thread

VIEW	FIELD	VALUE
Shaft diameter	Ø4 mm	
Axial distance 1	2 mm	
Axial distance 2	4 mm	
Overall length with tolerance	12 mm (+0/-0.1)	
Datum reference	Datum T	

Overall Dimensions and Input Interface

PARAMETER	PUBLISHED VALUE	UNIT
Frame Size	14	
Weight	0.09	kg
Wave Generator Dimension T	7+0.10 / 9.4+0.10	mm
Wave Generator Bore U	ΦH7 / ΦH7	
Wave Generator Keyway W	2JS9/P9 / 3JS9/P9	

- Confirm the selected series, frame size and ratio before using dimensions or interface geometry. Do not substitute a nearby frame or product form.
- Design the input shaft, key, effective engagement and axial retention to transmit the verified torque without uncontrolled wave-generator axial movement.
- Reserve assembly, sealing, inspection and removal access around the input, housing and output interfaces.

Mounting, Alignment and Fastener Control

- Keep mounting faces flat, clean and free of burrs, raised holes, debris and coating buildup. Confirm reliefs and chamfers prevent interference.
- Seat the fixed and flexible gear members in the host structure before inserting the wave generator. Do not force engagement in a misaligned condition.
- Control concentricity, tilt and axial position of the input and housing datums. Insert the wave generator smoothly without excessive force on its bearing.
- Tighten fasteners in a staged diagonal sequence using the applicable torque and locking specification. Verify free, even rotation during assembly.

Torque, Speed and Duty Boundaries

PARAMETER	PUBLISHED VALUE	UNIT
Rated Torque	5.4	N·m
Allowable Average Torque	6.9	N·m
Start/Stop Peak Torque	18	N·m
Instantaneous Maximum Torque	35	N·m
Maximum Input Speed	8500	r/min
Average Input Speed	3500	r/min
Design Life	10000	h

- Calculate average torque and average input speed from the complete acceleration, constant-speed, deceleration, dwell and reversal cycle.
- Treat start/stop peak and instantaneous maximum torque as transient boundaries. Do not use either value as a continuous operating point.
- Validate design life against actual torque, speed, shock frequency, lubrication, temperature, alignment and external loading.

Published Torque, Speed and Life Boundaries

PARAMETER	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Rated Torque	5.4 N·m	Use as the selected continuous output rating under validated duty and thermal conditions.
Allowable Average Torque	6.9 N·m	Calculate the actual time-weighted output torque over the complete cycle.
Start/Stop Peak Torque	18 N·m	Transient start/stop boundary; include acceleration and deceleration events.
Instantaneous Maximum Torque	35 N·m	Short-duration shock boundary only; do not use as a normal operating point.
Maximum Input Speed	8500 r/min	Maximum input-speed boundary; also verify motor and thermal limits.
Average Input Speed	3500 r/min	Validate the time-weighted average input speed over the complete duty cycle.
Design Life	10000 h	Design reference only; actual life depends on torque, speed, shock, lubrication and installation.

Transmission Accuracy and Torsional Rigidity

PARAMETER	PUBLISHED VALUE	UNIT
Backlash	±0	arc sec

- Installed positioning performance depends on reducer behavior, datum control, fastener distortion, motor and encoder errors, host stiffness and thermal growth.
- Use the published stiffness regions and transition torques when evaluating compliance, resonance, control gain and direction reversal.

Published Accuracy and Torsional Rigidity Boundaries

PARAMETER	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Backlash	±0 arc sec	Validate at the selected measurement condition and installed preload state.

Lubrication, Sealing and Thermal Control

- Use only the current lubricant, fill method and quantity for the exact configuration. Do not mix incompatible lubricants.
- Provide compatible static and dynamic sealing at the input, output and housing interfaces without distorting the reducer or restricting motion.
- Validate lubricant distribution and temperature for the installed orientation, speed, load cycle and enclosure.
- Prevent chips, fibers, cleaning residue, moisture and other contamination from entering the gear or bearing cavities during assembly and service.

Output Bearing and External Load Path

- Calculate radial, axial and moment loads at the output, including offset, acceleration, gravity, process force, impact and emergency-stop cases.
- Do not infer permissible external load from reducer torque capacity or frame size. Use applicable output-bearing data and safety criteria.
- Avoid forcing, impact, misalignment or host distortion through the output support bearing during installation and operation.

Integration Checklist

- | | |
|----|--|
| 01 | Confirm the drawing, published parameters and applicable assembly data identify this SKU. |
| 02 | Verify series, frame size, ratio, product form and input-interface dimensions. |
| 03 | Check mounting-face flatness, concentricity, tilt, chamfers, reliefs, cleanliness and support stiffness. |
| 04 | Verify input shaft, key, engagement length and axial wave-generator retention. |
| 05 | Assemble the fixed and flexible gear members before inserting the wave generator. |
| 06 | Use staged diagonal tightening and verify free, even rotation throughout assembly. |
| 07 | Calculate average, start/stop peak and shock torque over the complete operating cycle. |
| 08 | Validate average and maximum input speed, design life and installed thermal condition. |
| 09 | Evaluate backlash, angular accuracy, hysteresis and stiffness regions for the control system. |
| 10 | Confirm exact lubricant, fill quantity, orientation, sealing and contamination controls. |
| 11 | Validate output radial, axial and moment loads using applicable bearing data. |
| 12 | Include specified 2D, STEP, assembly, lubrication and bearing-load data in integration planning. |

[View SKU Product Datasheet](#)[Request controlled 2D drawing](#)[Request controlled STEP review](#)[Request a Quote](#)

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-HG-S01-F14-R50 and is intended for dimensional evaluation and preliminary integration. It is not a applicable manufacturing drawing, reducer selection approval, bearing-load approval, lubrication specification, machinery risk assessment, safety validation or integration planning document and must not be used as the sole basis for machining, shaft or key manufacture, fastener selection, sealing, lubricant filling or final integration. Before design freeze, assembly or commissioning, verify all dimensions, datum geometry, fits, shaft and key interfaces, wave-generator retention, fastener engagement and tightening controls, torque and speed duty, shock cases, torsional accuracy and rigidity, external output loads, lubrication, sealing, temperature, contamination and maintenance requirements against the applicable EmbodyStack engineering data for this exact SKU. Where this guide and applicable product documentation differ, the applicable product documentation governs. Validate the complete reducer, motor, host structure, output load, motion cycle, guarding, fault cases and applicable regulatory requirements under intended operating conditions.