

ENGINEERING DOCUMENTATION

Cup Component Set

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-HG-S01-F8-R30	DRAFT-08 / 28 Aug 2026	Engineering Integration Reference

Integration Overview


Cup Component Set for compact, coaxial, high-ratio rotary-axis integration. This guide supports interface planning, mounting alignment, duty validation, torsional behavior, lubrication, sealing and commissioning for ES-HG-S01-F8-R30.

Key Integration Facts


INTEGRATION ITEM	VALUE
Reduction Ratio	30
Frame Size	8

Product Structure & Views


These views present the selected product structure, mounting interfaces and relevant integration geometry for this SKU.

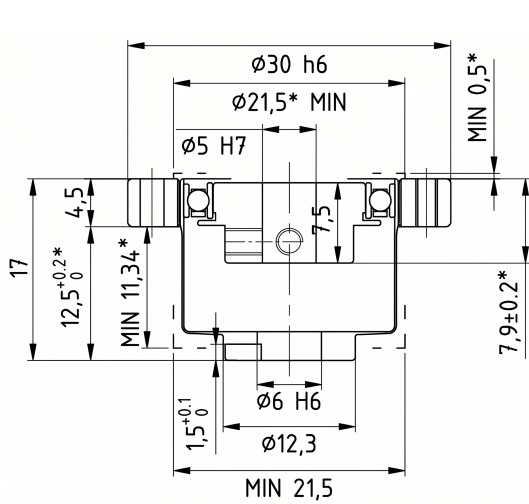


Mechanical View 1

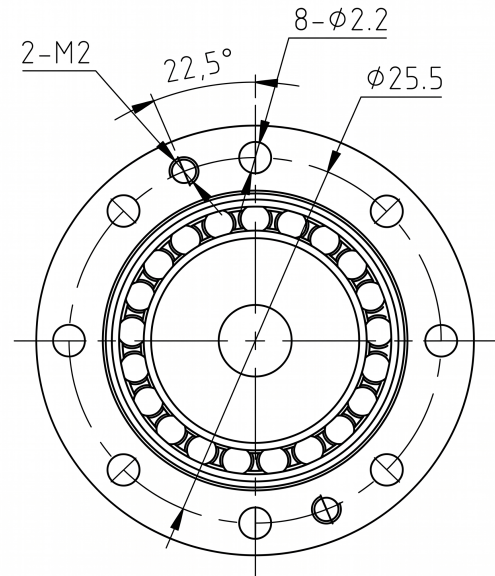

Mechanical View 2

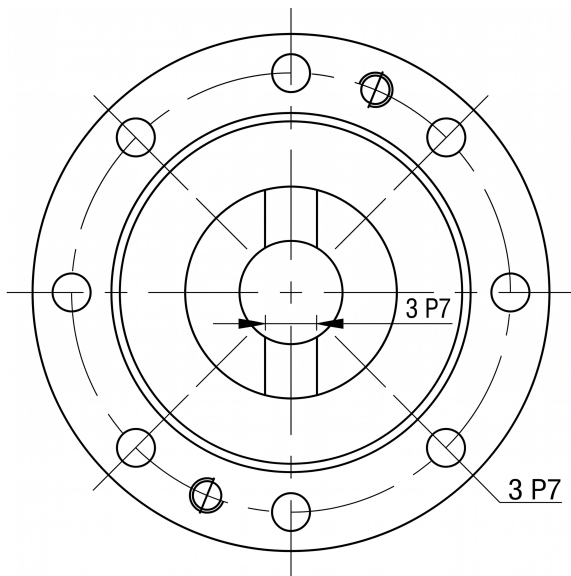

Mechanical View 3

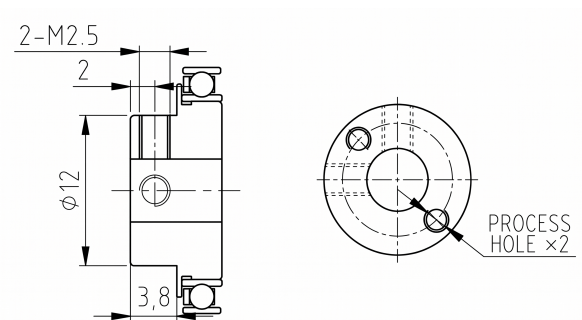

Mechanical View 4

VIEW	FIELD	VALUE
Mechanical View 1	Shaft outside diameter fit	Diameter 30 h6
	Minimum clearance diameter	Minimum diameter 21.5, marked with asterisk
	Minimum clearance	Minimum 0.5, marked with asterisk
	Hole diameter fit	Diameter 5 H7
	Local height dimension	4.5
	Local height dimension	7.5
	Toleranced linear dimension	12.5 +0.2/0, marked with asterisk
	Overall or local height dimension	17
	Minimum dimension	Minimum 11.34, marked with asterisk
	Symmetric toleranced dimension	7.9 ±0.2
	Hole diameter fit	Diameter 6 H6
	Toleranced local dimension	1.5 +0.1/0
	Diameter dimension	Diameter 12.3
	Minimum diameter dimension	Minimum 21.5
Mechanical View 2	Eight diameter 2.2 holes	8 holes, diameter 2.2
	Two M2 threaded holes	2 M2 threaded holes
	Angular spacing	22.5 degrees
	Diameter 25.5 circle	Diameter 25.5
Mechanical View 3	Slot width with tolerance class	Width 3 with P7 tolerance class
Mechanical View 4	M2.5 threaded holes quantity	2 × M2.5 threaded holes
	Local spacing dimension	2 mm
	Diameter dimension	Diameter 12 mm
	Process hole quantity	2 process holes
	Local dimension	3.8 mm

Overall Dimensions and Input Interface

PARAMETER	VALUE	UNIT
Frame Size	8	
Reduction Ratio	30	

Input Interface Design Guidance

- Confirm the selected series, frame size, ratio and product form before using dimensions or interface geometry.
- Design the input shaft, key, engagement and axial retention for the verified torque and assembly state.
- Reserve assembly, sealing, inspection and removal access around input, housing and output interfaces.

Mounting, Alignment and Fastener Control

- Keep mounting faces flat, clean and free of burrs, debris and coating buildup.
- Control concentricity, tilt and axial position of input and housing datums.
- Tighten fasteners in a staged diagonal sequence and verify free, even rotation during assembly.

Torque, Speed and Duty Boundaries

- Calculate torque and speed from acceleration, constant-speed, deceleration, dwell and reversal portions of the complete cycle.
- Treat start/stop peak and instantaneous maximum torque as transient boundaries.
- Validate life against actual torque, speed, shock frequency, lubrication, temperature, alignment and external loading.

Transmission Accuracy and Torsional Rigidity

- Installed positioning depends on reducer behavior, datum control, structural stiffness, motor and encoder errors and thermal growth.
- Use stiffness regions and transition torques when evaluating compliance, resonance, control gain and reversal.

Lubrication, Sealing and Thermal Control

- Use the specified lubricant, fill method and quantity for the exact configuration; do not mix incompatible lubricants.
- Provide compatible sealing at input, output and housing interfaces without distorting the reducer.
- Validate lubricant distribution and temperature for orientation, speed, load cycle and enclosure.
- Prevent chips, fibers, residue and moisture from entering gear or bearing cavities.

Output Bearing and External Load Path

- Calculate radial, axial and moment loads including offset, acceleration, gravity, process force, impact and emergency stops.
- Do not infer permissible external load from reducer torque capacity or frame size.
- Avoid forcing, impact, misalignment or host distortion through the output support during installation and operation.

Integration Checklist

- | | |
|----|---|
| 01 | Confirm the selected series, frame size, ratio and product form for this SKU. |
| 02 | Verify available dimensions and interface geometry without substituting a nearby configuration. |
| 03 | Check mounting-face flatness, concentricity, tilt, reliefs, cleanliness and support stiffness. |
| 04 | Verify input shaft, key, engagement length and axial retention. |
| 05 | Use staged diagonal tightening and verify free, even rotation. |
| 06 | Calculate average, start/stop peak and shock torque over the complete cycle. |
| 07 | Validate average and maximum input speed, design life and thermal condition. |
| 08 | Evaluate backlash, angular accuracy, hysteresis and stiffness for the control system. |
| 09 | Confirm lubricant, fill quantity, orientation, sealing and contamination controls. |
| 10 | Validate output radial, axial and moment loads using applicable bearing data. |

[View SKU Product Datasheet](#) [Request controlled 2D drawing](#) [Request controlled STEP review](#) [Request a Quote](#)

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-HG-S01-F8-R30 and supports preliminary dimensional evaluation and integration. It is not a manufacturing drawing, reducer selection approval, bearing-load approval, lubrication specification, machinery risk assessment, safety validation or integration planning document. Before design freeze, assembly or commissioning, verify all dimensions, datum geometry, fits, interfaces, retention, fasteners, torque and speed duty, shock cases, torsional behavior, external loads, lubrication, sealing, temperature, contamination and maintenance requirements against the current EmbodyStack engineering data for this exact SKU. Validate the complete reducer, motor, host structure, output load, motion cycle, guarding, fault cases and applicable regulatory requirements under intended operating conditions.