

ENGINEERING DOCUMENTATION

Simple High-Torque Hollow Shaft Gear Unit

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-HG-S18-F14-R120	DRAFT-08 / 28 Aug 2026	Engineering Integration Reference

Integration Overview


Simple High-Torque Hollow Shaft Gear Unit for compact, coaxial, high-ratio rotary-axis integration. This guide supports interface planning, mounting alignment, duty validation, torsional behavior, lubrication, sealing and commissioning for ES-HG-S18-F14-R120.

Key Integration Facts


INTEGRATION ITEM	VALUE
Reduction Ratio	120
Frame Size	14

Product Structure & Views


These views present the selected product structure, mounting interfaces and relevant integration geometry for this SKU.

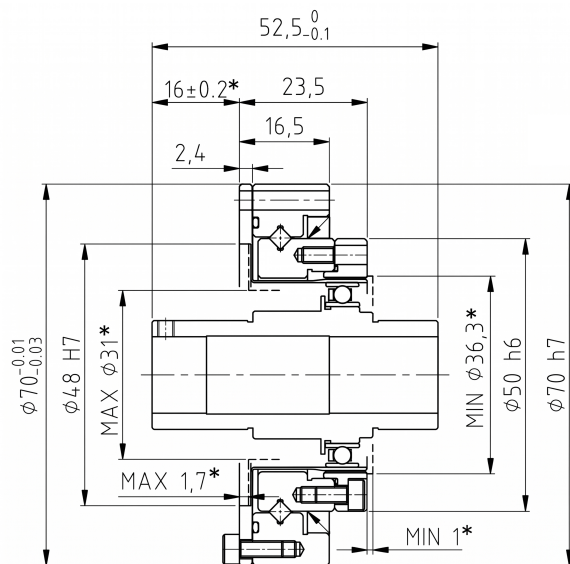


Mechanical View 1

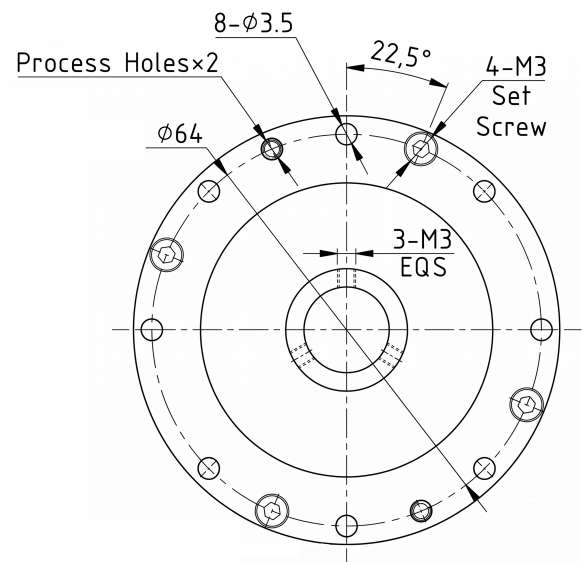

Mechanical View 2

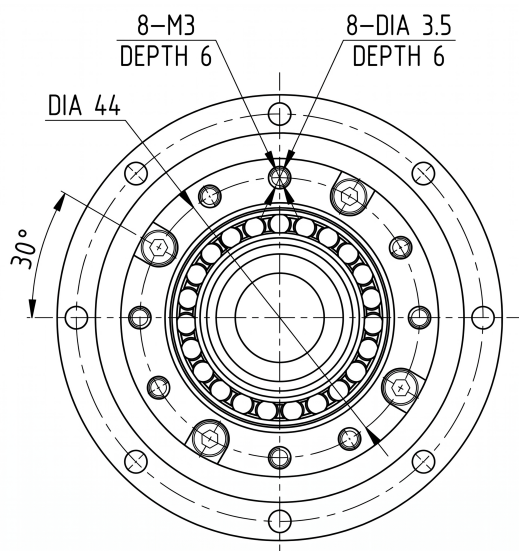

Mechanical View 3

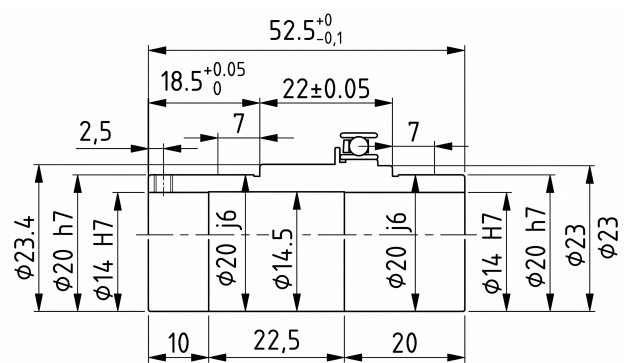

Mechanical View 4

VIEW	FIELD	VALUE
Mechanical View 1	Overall length	52.5 0/-0.1 mm
	Mounting face width	16±0.2 mm (reference)
	Middle section length	23.5 mm
	Right section length	16.5 mm
	Boss height	2.4 mm
	Left outer diameter with tolerance	Φ0 -0.01/-0.03 mm
	Left mounting bore diameter H7	Φ8 H7
	Left maximum inner bore diameter (reference)	MAX Φ1 mm (reference)
	Right minimum inner bore diameter (reference)	MIN Φ6.3 mm (reference)
	Output shaft diameter h6	Φ0 h6
	Right outer diameter h7	Φ0 h7
	Bottom maximum clearance (reference)	MAX 1.7 mm (reference)
	Right minimum clearance (reference)	MIN 1 mm (reference)
Mechanical View 2	Eight diameter 3.5 holes	8 holes, diameter 3.5 mm
	Process holes quantity	Process holes, quantity 2
	Angular spacing	22.5 degrees
	Set screw thread specification and quantity	4 M3 set screws
	Diameter 64 circle	Diameter 64 mm
	Three equally spaced M3 threaded holes	3 M3 holes equally spaced
Mechanical View 3	8x M3 threaded holes depth	8x M3 threaded holes, depth 6
	8x diameter 3.5 holes depth	8x DIA 3.5 holes, depth 6
	Hole pitch circle diameter	DIA 44
	Hole angular spacing	30 degrees
Mechanical View 4	Overall length	52.5 mm, upper tolerance +0, lower tolerance -0.1
	Left step length	18.5 mm, upper tolerance +0.05, lower tolerance 0
	Middle section length	22 mm ±0.05
	Left end small step length	2.5 mm
	Left local length	7 mm
	Right local length	7 mm
	Left end outer diameter	Diameter 23.4 mm
	Left shaft fit diameter	Diameter 20 mm, tolerance grade h7
	Left bore fit diameter	Diameter 14 mm, tolerance grade H7
	Middle-left shaft fit diameter	Diameter 20 mm, tolerance grade j6
	Middle step diameter	Diameter 14.5 mm
	Middle-right shaft fit diameter	Diameter 20 mm, tolerance grade j6
	Right bore fit diameter	Diameter 14 mm, tolerance grade H7
	Right shaft fit diameter	Diameter 20 mm, tolerance grade h7
	Right end outer diameter	Diameter 23 mm
	Bottom left segment length	10 mm
	Bottom center segment length	22.5 mm

VIEW	FIELD	VALUE
Bottom right segment length	20 mm	

Overall Dimensions and Input Interface

PARAMETER	VALUE	UNIT
Frame Size	14	
Reduction Ratio	120	

Input Interface Design Guidance

- Confirm the selected series, frame size, ratio and product form before using dimensions or interface geometry.
- Design the input shaft, key, engagement and axial retention for the verified torque and assembly state.
- Reserve assembly, sealing, inspection and removal access around input, housing and output interfaces.

Mounting, Alignment and Fastener Control

- Keep mounting faces flat, clean and free of burrs, debris and coating buildup.
- Control concentricity, tilt and axial position of input and housing datums.
- Tighten fasteners in a staged diagonal sequence and verify free, even rotation during assembly.

Torque, Speed and Duty Boundaries

- Calculate torque and speed from acceleration, constant-speed, deceleration, dwell and reversal portions of the complete cycle.
- Treat start/stop peak and instantaneous maximum torque as transient boundaries.
- Validate life against actual torque, speed, shock frequency, lubrication, temperature, alignment and external loading.

Transmission Accuracy and Torsional Rigidity

PARAMETER	VALUE	UNIT
Angle Transmission Accuracy	1.5	arcmin
Hysteresis Loss	1	
Torsional Rigidity K1	0.47	×10 ⁴ Nm/rad
Torsional Rigidity K2	0.61	
Torsional Rigidity K3	0.71	
Torsional Rigidity T1	2	Nm
Torsional Rigidity T2	6.9	

- Installed positioning depends on reducer behavior, datum control, structural stiffness, motor and encoder errors and thermal growth.
- Use stiffness regions and transition torques when evaluating compliance, resonance, control gain and reversal.

Lubrication, Sealing and Thermal Control

- Use the specified lubricant, fill method and quantity for the exact configuration; do not mix incompatible lubricants.
- Provide compatible sealing at input, output and housing interfaces without distorting the reducer.
- Validate lubricant distribution and temperature for orientation, speed, load cycle and enclosure.
- Prevent chips, fibers, residue and moisture from entering gear or bearing cavities.

Output Bearing and External Load Path

- Calculate radial, axial and moment loads including offset, acceleration, gravity, process force, impact and emergency stops.
- Do not infer permissible external load from reducer torque capacity or frame size.
- Avoid forcing, impact, misalignment or host distortion through the output support during installation and operation.

Integration Checklist

- 01 Confirm the selected series, frame size, ratio and product form for this SKU.
- 02 Verify available dimensions and interface geometry without substituting a nearby configuration.
- 03 Check mounting-face flatness, concentricity, tilt, reliefs, cleanliness and support stiffness.
- 04 Verify input shaft, key, engagement length and axial retention.
- 05 Use staged diagonal tightening and verify free, even rotation.
- 06 Calculate average, start/stop peak and shock torque over the complete cycle.
- 07 Validate average and maximum input speed, design life and thermal condition.
- 08 Evaluate backlash, angular accuracy, hysteresis and stiffness for the control system.
- 09 Confirm lubricant, fill quantity, orientation, sealing and contamination controls.
- 10 Validate output radial, axial and moment loads using applicable bearing data.

[View SKU Product Datasheet](#) [Request controlled 2D drawing](#) [Request controlled STEP review](#) [Request a Quote](#)

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-HG-S18-F14-R120 and supports preliminary dimensional evaluation and integration. It is not a manufacturing drawing, reducer selection approval, bearing-load approval, lubrication specification, machinery risk assessment, safety validation or integration planning document. Before design freeze, assembly or commissioning, verify all dimensions, datum geometry, fits, interfaces, retention, fasteners, torque and speed duty, shock cases, torsional behavior, external loads, lubrication, sealing, temperature, contamination and maintenance requirements against the current EmbodyStack engineering data for this exact SKU. Validate the complete reducer, motor, host structure, output load, motion cycle, guarding, fault cases and applicable regulatory requirements under intended operating conditions.