ENGINEERING DOCUMENTATION

Standard Cup Unit Type I

Dimensional & Integration Guide

DOCUMENT	REVISION / ISSUE	STATUS
DIG-ES-HG-S22-F25-R120	DRAFT-08 / 26 Aug 2026	Engineering Integration Reference

Integration Overview

Cup-form harmonic gear gear unit with integrated product interfaces for the selected configuration for compact, coaxial, high-ratio rotary axes. This guide supports host-interface design, wave-generator input integration, mounting alignment, load-cycle validation, torsional behavior, lubrication, sealing and commissioning for ES-HG-S22-F25-R120.

Key Integration Facts

INTEGRATION ITEM	PUBLISHED VALUE
Rated Torque	67 N·m
Instantaneous Maximum Torque	304 N·m
Start/Stop Peak Torque	167 N·m
Backlash	≤20 arc sec
Reduction Ratio	120
Maximum Input Speed	5600 r/min
Frame Size	25
Weight	1.46 kg

Product Structure & Views

These views present the selected product structure, mounting interfaces and relevant integration geometry for this SKU.

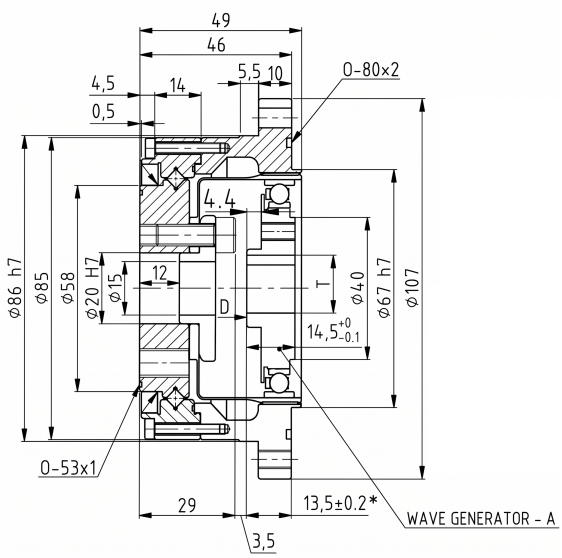

Mechanical View 1

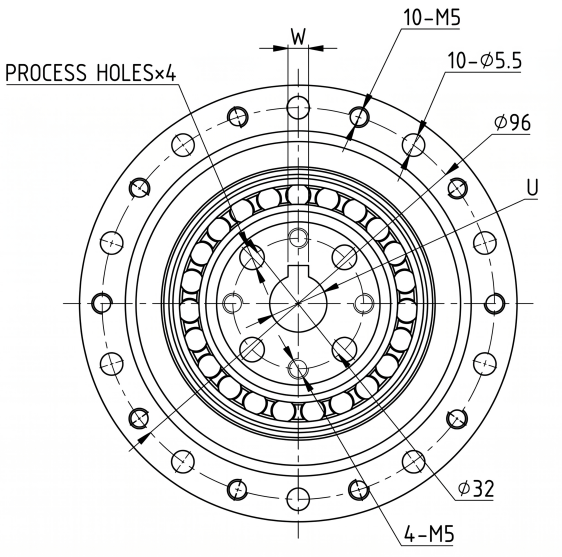

Mechanical View 2

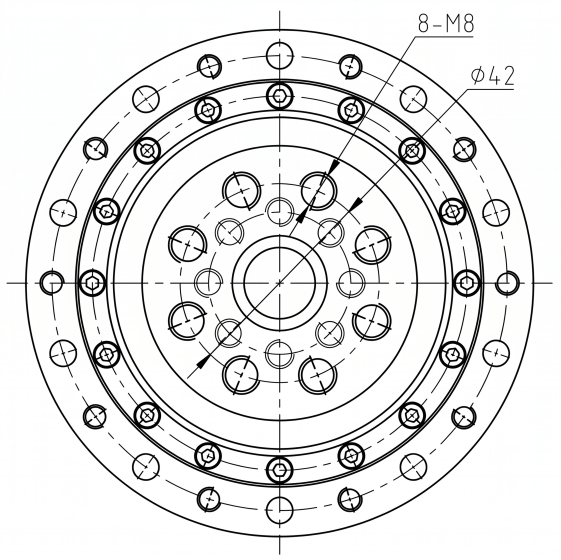

Mechanical View 3

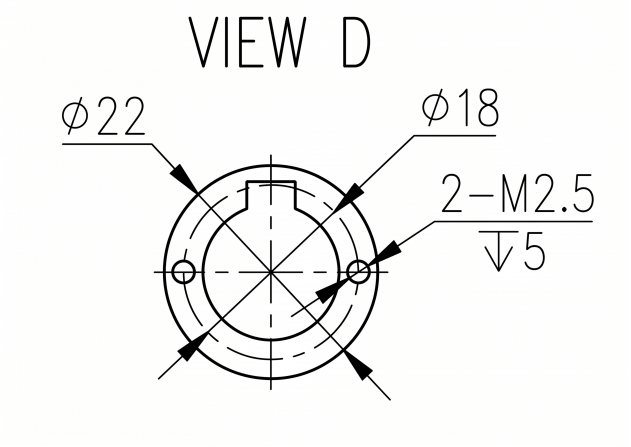

Mechanical View 4

VIEW	FIELD	VALUE
Mechanical View 1	Overall axial length	49 mm
	Axial length 2	46 mm
	Thread or tooth profile specification	0-80x2
	Axial segment length 5.5	5.5 mm
	Axial segment length 10	10 mm
	Axial segment length 4.5	4.5 mm
	Axial segment length 14	14 mm
	Axial segment length 0.5	0.5 mm
	Outer diameter Ø86 h7	Ø86 h7
	Outer diameter Ø85	Ø85 mm
	Outer diameter Ø58	Ø58 mm
	Bore diameter Ø20 H7	Ø20 H7
	Bore diameter Ø15	Ø15 mm
	Axial segment length 12	12 mm
	Groove depth or step 4.4	4.4 mm
	Datum D (left view)	Datum D
	Label T	T
	Outer diameter Ø40	Ø40 mm
	Outer diameter Ø67 h7	Ø67 h7
	Maximum outer diameter Ø107	Ø107 mm
	Axial dimension 14.5 +0/-0.1	14.5 +0/-0.1 mm
	Datum D (right view)	Datum D
	Thread or spline specification 0-53x1	0-53x1
	Axial length 29	29 mm
	Axial dimension 13.5±0.2 (reference/special)	13.5 ±0.2 mm *
	Axial segment length 3.5	3.5 mm
	Component label - Wave Generator A	Wave Generator - A
Mechanical View 2	M5 threaded hole quantity	10 × M5 threaded holes
	Local width label	Width identified as W; numeric value not specified in this crop
	5.5 mm mounting hole quantity	10 × Ø5.5 holes
	Process hole quantity note	Process holes ×4
	Diameter 96 circular feature	Ø96
	U label	U label; numeric value not specified
	Diameter 32 circular feature	Ø32
	M5 threaded hole quantity	4 × M5 threaded holes
Mechanical View 3	Threaded mounting hole quantity and thread size	8 × M8 threaded holes

VIEW	FIELD	VALUE
Mounting hole pitch circle diameter	Diameter 42	
Mechanical View 4	View identification	View D
	Outer diameter dimension	Diameter 22 mm
	Inner diameter dimension	Diameter 18 mm
	Threaded hole quantity and thread size	2 × M2.5 threaded holes
	Hole depth	Depth 5 mm

Overall Dimensions and Input Interface

PARAMETER	PUBLISHED VALUE	UNIT
Frame Size	25	
Weight	1.46	kg
Wave Generator Dimension T	12.8+0.10 / 16.3+0.10	mm
Wave Generator Bore U	ϕ11H7 / ϕ14H7	
Wave Generator Keyway W	4JS9/P9 / 5JS9/P9	

- Confirm the selected series, frame size and ratio before using dimensions or interface geometry. Do not substitute a nearby frame or product form.
- Design the input shaft, key, effective engagement and axial retention to transmit the verified torque without uncontrolled wave-generator axial movement.
- Reserve assembly, sealing, inspection and removal access around the input, housing and output interfaces.

Mounting, Alignment and Fastener Control

- Keep mounting faces flat, clean and free of burrs, raised holes, debris and coating buildup. Confirm reliefs and chamfers prevent interference.
- Seat the fixed and flexible gear members in the host structure before inserting the wave generator. Do not force engagement in a misaligned condition.
- Control concentricity, tilt and axial position of the input and housing datums. Insert the wave generator smoothly without excessive force on its bearing.
- Tighten fasteners in a staged diagonal sequence using the applicable torque and locking specification. Verify free, even rotation during assembly.

Torque, Speed and Duty Boundaries

PARAMETER	PUBLISHED VALUE	UNIT
Rated Torque	67	N·m
Allowable Average Torque	108	N·m
Start/Stop Peak Torque	167	N·m
Instantaneous Maximum Torque	304	N·m
Maximum Input Speed	5600	r/min
Average Input Speed	3500	r/min
Design Life	15000	h

- Calculate average torque and average input speed from the complete acceleration, constant-speed, deceleration, dwell and reversal cycle.
- Treat start/stop peak and instantaneous maximum torque as transient boundaries. Do not use either value as a continuous operating point.
- Validate design life against actual torque, speed, shock frequency, lubrication, temperature, alignment and external loading.

Published Torque, Speed and Life Boundaries

PARAMETER	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Rated Torque	67 N·m	Use as the selected continuous output rating under validated duty and thermal conditions.
Allowable Average Torque	108 N·m	Calculate the actual time-weighted output torque over the complete cycle.
Start/Stop Peak Torque	167 N·m	Transient start/stop boundary; include acceleration and deceleration events.
Instantaneous Maximum Torque	304 N·m	Short-duration shock boundary only; do not use as a normal operating point.
Maximum Input Speed	5600 r/min	Maximum input-speed boundary; also verify motor and thermal limits.
Average Input Speed	3500 r/min	Validate the time-weighted average input speed over the complete duty cycle.
Design Life	15000 h	Design reference only; actual life depends on torque, speed, shock, lubrication and installation.

Transmission Accuracy and Torsional Rigidity

PARAMETER	PUBLISHED VALUE	UNIT
Backlash	≤20	arc sec

- Installed positioning performance depends on reducer behavior, datum control, fastener distortion, motor and encoder errors, host stiffness and thermal growth.
- Use the published stiffness regions and transition torques when evaluating compliance, resonance, control gain and direction reversal.

Published Accuracy and Torsional Rigidity Boundaries

PARAMETER	PUBLISHED VALUE	INTEGRATION REQUIREMENT
Backlash	≤20 arc sec	Validate at the selected measurement condition and installed preload state.

Lubrication, Sealing and Thermal Control

- Use only the current lubricant, fill method and quantity for the exact configuration. Do not mix incompatible lubricants.
- Provide compatible static and dynamic sealing at the input, output and housing interfaces without distorting the reducer or restricting motion.
- Validate lubricant distribution and temperature for the installed orientation, speed, load cycle and enclosure.
- Prevent chips, fibers, cleaning residue, moisture and other contamination from entering the gear or bearing cavities during assembly and service.

Output Bearing and External Load Path

- Calculate radial, axial and moment loads at the output, including offset, acceleration, gravity, process force, impact and emergency-stop cases.
- Do not infer permissible external load from reducer torque capacity or frame size. Use applicable output-bearing data and safety criteria.
- Avoid forcing, impact, misalignment or host distortion through the output support bearing during installation and operation.

Integration Checklist

01	Confirm the drawing, published parameters and applicable assembly data identify this SKU.
02	Verify series, frame size, ratio, product form and input-interface dimensions.
03	Check mounting-face flatness, concentricity, tilt, chamfers, reliefs, cleanliness and support stiffness.
04	Verify input shaft, key, engagement length and axial wave-generator retention.
05	Assemble the fixed and flexible gear members before inserting the wave generator.
06	Use staged diagonal tightening and verify free, even rotation throughout assembly.
07	Calculate average, start/stop peak and shock torque over the complete operating cycle.
08	Validate average and maximum input speed, design life and installed thermal condition.
09	Evaluate backlash, angular accuracy, hysteresis and stiffness regions for the control system.
10	Confirm exact lubricant, fill quantity, orientation, sealing and contamination controls.
11	Validate output radial, axial and moment loads using applicable bearing data.
12	Include specified 2D, STEP, assembly, lubrication and bearing-load data in integration planning.

View SKU Product Datasheet **Request controlled 2D drawing** **Request controlled STEP review** **Request a Quote**

Engineering Use and Verification Notice

01. This Dimensional & Integration Guide applies only to EmbodyStack SKU ES-HG-S22-F25-R120 and is intended for dimensional evaluation and preliminary integration. It is not a applicable manufacturing drawing, reducer selection approval, bearing-load approval, lubrication specification, machinery risk assessment, safety validation or integration planning document and must not be used as the sole basis for machining, shaft or key manufacture, fastener selection, sealing, lubricant filling or final integration. Before design freeze, assembly or commissioning, verify all dimensions, datum geometry, fits, shaft and key interfaces, wave-generator retention, fastener engagement and tightening controls, torque and speed duty, shock cases, torsional accuracy and rigidity, external output loads, lubrication, sealing, temperature, contamination and maintenance requirements against the applicable EmbodyStack engineering data for this exact SKU. Where this guide and applicable product documentation differ, the applicable product documentation governs. Validate the complete reducer, motor, host structure, output load, motion cycle, guarding, fault cases and applicable regulatory requirements under intended operating conditions.